

HP StorageWorks

Director 2/64 installation guide

FW 07.00.00/HAFM SW 08.06.00

Legal and notice information

© Copyright 2002–2005 Hewlett-Packard Development Company, L.P.

© Copyright 2005 McDATA Corp.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information is provided "as is" without warranty of any kind and is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

Compaq Computer Corporation is a wholly-owned subsidiary of Hewlett-Packard Company.

Intel and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.

Microsoft, Windows, Windows NT, and Windows XP are U.S. registered trademarks of Microsoft Corporation.

UNIX® is a registered trademark of The Open Group.

Printed in the USA

Director 2/64 installation guide

Contents

About this guide	9
Intended audience	9
Related documentation	9
Document conventions and symbols	10
Rack stability	11
HP technical support	11
HP-authorized reseller	11
Helpful web sites	11
1 Overview	13
Director description	13
Features	13
Director management	13
Error-detection, reporting, and serviceability	14
Zoning	16
Multi-switch fabrics	16
Hardware components	17
Front view	18
CTP2 card	18
Front bezel	19
Cable management assembly	19
Power supplies	19
UPM card	19
Rear view	21
Fan modules	21
SBAR assembly	21
Power module assembly	22
Tools and test equipment	22
Tools supplied with the director	22
Tools supplied by service personnel	24
Optional kits	24
2 Installing and configuring the director	27
Installation options	27
Review installation requirements	27
Items required for installation	28
Select an operating location	29
Cooling and power requirements	29
Unpack and inspect the director	29
Install the director in a rack	34
Required tools	34

Tips for installing more than one switch	34
Transfer the director to the lift device	35
HP 9000, HP 10000, and HP 11000 Series rack installation	35
Install the shelf brackets in a HP 9000, HP 10000, and HP 11000 Series rack.	35
Prepare the switch for installation	36
Secure the mounting hardware	37
Insert the cage nuts	37
Insert the front cage nuts in the rack	37
Insert the rear cage nuts in the rack	38
Finalize the rack-mounting procedure	38
HP system/e and industry-standard 19-inch rack installation	41
Install the anti-tip feet on an HP system/e rack	41
Install mounting bracket hardware in the rack.	42
Prepare the front and rear rack columns	45
Prepare the switch for installation	47
Finalize the rack-mounting procedure	48
Sliding shelf installation—for an HAFM appliance only	50
Recommended cable management	53
Power-on self test.	54
Configure director network information	54
Default settings	55
Changing the director's IP address.	55
LAN-connect the director	59
HAFM appliance	60
Enabling HAFM to manage the director	61
Verify communication between the director and HAFM appliance	62
Set director date and time.	63
Set date and time manually	64
Synchronize date and time	64
Frequently used HAFM settings.	65
Setting the director online	65
Setting the director offline	66
Configuring director identification	66
Configuring director management style	67
Configuring switch parameters	67
Switch parameters	68
Domain ID	68
Preferred	68
Insistent	69
Rerouting delay	69
Domain RSCNs	69
Suppress RSCNs on zone set activations.	70
Director speed.	70
Configuring fabric parameters.	70
Fabric parameters.	71
BB_Credit	71
R_A_TOV	71

E_D_TOV	71
Switch priority	72
Interop mode.	72
Configuring preferred path	73
Configuring switch binding	73
Configuring ports.	73
Configuring port addresses (FICON)	76
Configuring SNMP trap message recipients	76
Configuring and enabling e-mail notification.	77
Configuring and enabling call-home features	79
Configuring and enabling Ethernet events.	79
Configuring threshold alerts	79
Creating new alerts.	80
Modifying alerts	84
Activating or deactivating alerts	85
Deleting alerts	85
Configuring SANtegrity Authentication.	85
Configuring Open Systems Management Server	86
Configuring FICON Management Server	86
Configuring feature key	86
Configuring Open Trunking	86
Enabling Embedded Web Server.	87
Enabling Telnet	87
Connecting cables to the Fibre Channel ports	87
Connecting the director to a fabric	88
Unpacking, inspecting, and installing the Ethernet hub (optional)	89
Using HAFM from a remote location	89
Remote workstation minimum requirements	89
Installing HAFM client on a remote workstation	90
Launching HAFM from the remote client	91
3 Managing firmware versions	93
Determining a director firmware version	93
Adding a firmware version	94
Modifying a firmware version description	95
Deleting a firmware version	96
Downloading a firmware version to a director	96
Backing up the director's configuration	98
A Regulatory compliance and safety	99
Regulatory compliance	99
Federal Communications Commission notice.	99
Class A equipment	99
Class B equipment	99
Declaration of conformity for products marked with the FCC logo, United States only	100
Modifications	100
Cables	100

Regulatory compliance identification numbers	100
Laser device	100
Laser safety warning	101
Certification and classification information	101
Laser product label	101
International notices and statements	101
Canadian notice (avis Canadien)	101
Class A equipment	101
Class B equipment	102
European Union notice	102
BSMI notice	102
Japanese notice	103
Korean notices	103
Safety	103
Battery replacement notice	103
Taiwan battery recycling notice	104
Power cords	104
Japanese power cord notice	105
Electrostatic discharge	105
Preventing electrostatic damage	105
Grounding methods	105
B Technical specifications	107
Physical dimensions	107
Environmental specifications	107
Power requirements	108
Operating tolerances	108
Laser information	109
Index	111
Figures	
1 Director components—front	18
2 UPM card LEDs and connectors	20
3 Director components—rear	21
4 Torque tool and hex adapter	22
5 Loopback plug	23
6 Fiber-Optic protective plug	23
7 Null modem cable	23
8 Carton contents for a Director 2/64	31
9 Carton contents for an HP 9000, HP 10000, and HP 11000 Series rack	31
10 Carton contents for a HP system/e or industry-standard 19-in rack installation	33
11 Securing shelf brackets	36
12 Securing the two mounting brackets	37
13 Aligning the switch in the rack	39
14 Securing the rear angle brackets	40
15 AC power connections	41
16 Mounting anti-tip feet for a HP system/e rack	42

17	Rail tray mounting location requirement	43
18	Attaching a rear rail tray bracket	43
19	Installing a Tinnerman nut on the rack-front rail in U1	44
20	Inserting the rail tray in the rack	45
21	Preparing the front rack columns	46
22	Preparing the rear rack columns	47
23	Installing the rack-mounting brackets on the switch	48
24	Positioning the switch in the rack	49
25	Securing the switch to the rack	50
26	Installing the sliding shelf brackets	51
27	Positioning the sliding shelf bracket on a rail rear slot	52
28	Positioning the sliding shelf bracket at the rack front	53
29	Recommended cable management	54
30	Connecting the null modem cable between the director and a workstation	56
31	Connection Description dialog box	57
32	Connect To dialog box	57
33	COMn Properties dialog box	57
34	HyperTerminal window	59
35	HyperTerminal dialog box (1)	59
36	HyperTerminal dialog box (2)	59
37	LAN-connect the director	60
38	Discover Setup dialog box	61
39	Domain Information dialog box (IP Address page)	61
40	Hardware View page	63
41	Configure Date and Time dialog box	64
42	Date and Time Synced dialog box	64
43	Configure Identification dialog box	66
44	Configure Switch Parameters dialog box	68
45	Configure Fabric Parameters dialog box	71
46	Configure Ports dialog box	74
47	Configure SNMP dialog box	76
48	Email Event Notification Setup dialog box	77
49	HAFM 8.6 Server Users dialog box	78
50	Define Filter dialog box	78
51	Configure Ethernet Event dialog box	79
52	Configure Threshold Alerts dialog box	80
53	New Threshold Alerts dialog box—first screen	81
54	New Threshold Alerts dialog box—second screen	82
55	New Threshold Alerts dialog box—third screen	83
56	New Threshold Alerts dialog box—summary screen	84
57	Configure Threshold Alerts dialog box	84
58	Configure SANtegrity Authentication dialog box	86
59	Connect the Fibre Channel cables	87
60	Port Properties dialog box	88
61	HAFM remote client install	90
62	HAFM 8.6 Log In dialog box	91
63	View All - HAFM 8.6 window	92

64	Director Firmware Library dialog box	93
65	New Firmware Version dialog box	95
66	New Firmware Description dialog box	95
67	Backup and Restore Configuration dialog box.	97
68	Class 1 laser product label	101

Tables

1	Document conventions	10
2	Director optional kits	24
3	Shipping carton contents for a Director 2/64	31
4	Shipping carton contents for an HP 9000, HP 10000, and HP 11000 Series rack	32
5	Parts for Installing in an HP System/e and industry-standard 19-inch rack	33
6	Director operational states and symbols	62
7	Dimensions	107
8	Environmental specifications	107
9	Power requirements	108
10	Operating tolerances	108
11	Laser specs - 2 Gb	109

About this guide

This guide provides information about installing, configuring, managing, and verifying operation of the HP StorageWorks Director 2/64. The director switch connects storage devices, hosts, and servers in a SAN. The director is easily managed and configured to optimize the performance of your SAN.

Intended audience

This guide is intended for trained service and installation representatives experienced with the SAN technology and Fibre Channel technology.

Related documentation

In addition to this guide, please refer to other documents for this product:

For a list of corresponding documentation included with this product, see the Related documents section of the *HP StorageWorks Director 2/64 release notes*.

For the latest information, documentation, and firmware releases, please visit the HP StorageWorks website:






<http://h18006.www1.hp.com/storage/saninfrastructure.html>

For information about Fibre Channel standards, visit the Fibre Channel Industry Association website <http://www.fibrechannel.org>

Document conventions and symbols

Table 1 Document conventions

Convention	Element
Medium blue text: Figure 1	Cross-reference links and e-mail addresses
Medium blue, underlined text (http://www.hp.com)	Web site addresses
Bold font	<ul style="list-style-type: none">• Key names• Text typed into a GUI element, such as into a box• GUI elements that are clicked or selected, such as menu and list items, buttons, and check boxes
<i>Italics font</i>	Text emphasis
Monospace font	<ul style="list-style-type: none">• File and directory names• System output• Code• Text typed at the command-line
<i>Monospace, italic font</i>	<ul style="list-style-type: none">• Code variables• Command-line variables
Monospace, bold font	Emphasis of file and directory names, system output, code, and text typed at the command line

-  **WARNING!** Indicates that failure to follow directions could result in bodily harm or death.
-  **CAUTION:** Indicates that failure to follow directions could result in damage to equipment or data.
-  **IMPORTANT:** Provides clarifying information or specific instructions.
-  **NOTE:** Provides additional information.
-  **TIP:** Provides helpful hints and shortcuts.

Rack stability

⚠ **WARNING!** To reduce the risk of personal injury or damage to equipment:

- Extend leveling jacks to the floor.
 - Ensure that the full weight of the rack rests on the leveling jacks.
 - Install stabilizing feet on the rack.
 - In multiple-rack installations, secure racks together.
 - Extend only one rack component at a time. Racks may become unstable if more than one component is extended.
-

HP technical support

Telephone numbers for worldwide technical support are listed on the HP support web site:

<http://www.hp.com/support/>

Collect the following information before calling:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Operating system type and revision level
- Detailed, specific questions

For continuous quality improvement, calls may be recorded or monitored.

HP strongly recommends that customers sign up online using the Subscriber's choice web site:

<http://www.hp.com/go/e-updates>

- Subscribing to this service provides you with e-mail updates on the latest product enhancements, newest versions of drivers, and firmware documentation updates as well as instant access to numerous other product resources.
- After signing up, you can quickly locate your products by selecting **Business support** and then **Storage** under Product Category.

HP-authorized reseller

For the name of your nearest HP-authorized reseller:

- In the United States, call 1-800-345-1518.
- Elsewhere, visit this HP web site: <http://www.hp.com>. Then click **Contact HP** to find locations and telephone numbers.

Helpful web sites

For third-party product information, see the following HP web sites:

- <http://www.hp.com>
- <http://www.hp.com/go/storage>
- <http://www.hp.com/support/>
- <http://www.docs.hp.com>

1 Overview

This chapter contains the following HP StorageWorks Director 2/64 information:

- [Director description](#), page 13
- [Features](#), page 13
- [Hardware components](#), page 17
- [Tools and test equipment](#), page 22
- [Optional kits](#), page 24

Director description

The director is a second-generation, 64-port product that provides dynamic switched connections between Fibre Channel servers and devices in a SAN environment. Directors are managed and controlled through an High Availability Fabric Manager (HAFM) appliance with HAFM and Director 2/64 Element Manager installed. The HAFM appliance is a 1U rack-mount appliance that provides a central point of control for up to 48 directors and/or edge switches.

Multiple directors and the HAFM appliance communicate through the customer's local area network (LAN).

Features


Features of the Director 2/64 include:

- Scalable from 32 to 64 user ports (with optional UPM 2 Gb add-on)
- 100% dynamic non-blocking, cut through switching with congestion queuing
- Online error detection, error isolation, and error recovery
- Redundant, hot-pluggable components
- Full duplex 200 MB/sec per port performance
- Less than 2- μ s average switch latency
- 100-km distance support (60 buffers), with use of repeaters
- Small form factor, hot-pluggable optical transceivers, auto configure G_ports
- Combination short-wave or long-wave laser transceivers
- Redundant power supplies and fan modules
- Online product repair for Field Replaceable Units (FRUs)
- Periodic health check and enhanced system monitoring
- Non-disruptive firmware load and update

Director management

The director is managed and controlled through:

- The HAFM application. This graphical user interface (GUI) resides on the HAFM appliance and provides a single point of management for all directors, and a launching point for the Director 2/64 Element Manager.
- Simple network management protocol (SNMP). A SNMP agent is implemented through the HAFM application that allows administrators on SNMP management workstations to access director management information using any standard network management tool. Administrators can assign internet protocol (IP) addresses and corresponding community names for up to 12 SNMP workstations functioning as SNMP trap message recipients. Refer to the *HP StorageWorks SNMP reference guide for directors and edge switches* for more information.
- The Internet using the Embedded Web Server (EWS) interface installed on the director. This interface supports configuration, statistics monitoring, and basic operation of the director, but does not offer all the capabilities of the Director 2/64 Element Manager. Administrators launch the EWS interface from a remote PC by entering the director's IP address as the internet URL, then entering a user name and password at a login screen. The PC browser then becomes a management console.

 **NOTE:** The default user name for the right to view status and other information is *operator*. The default user name for the right to modify configuration data, perform maintenance tasks, or perform other options is *Administrator*. The default password for both user names is *password*.


- The command line interface (CLI). The CLI allows you to access many HAFM and Element Manager functions while entering commands during a telnet session with the director. The primary purpose of the CLI is to automate management of a large number of directors using scripts. The CLI is not an interactive interface; no checking is done for pre-existing conditions and no prompts display to guide users through tasks. Refer to the *HP StorageWorks CLI reference guide for directors and edge switches* for more information.
- A customer-supplied PC or UNIX-based platform with the HAFM appliance and client HAFM and Director Element Manager installed.
- A customer-supplied remote workstation communicating with the HAFM appliance through a corporate intranet.
- A customer-supplied PC platform with a network connection to the EWS interface installed on the director.
- A customer-supplied server platform communicating with the switch through a LAN or corporate intranet. The HAFM applications are ordered and installed on the server by the customer.

Error-detection, reporting, and serviceability


The director provides the following error-detection, reporting, and serviceability features:

- Light-emitting diodes (LEDs) on director FRUs and the front bezel that provide visual indicators of hardware status or malfunctions.
- System and threshold alerts, event logs, audit logs, link incident logs, threshold alert logs, and hardware logs that display director, Ethernet link, and Fibre Channel link status at the HAFM appliance, remote workstation, or EWS.

- Diagnostic software that performs power-on self-tests (POSTs) and port diagnostics (internal loopback, external loopback, and Fibre Channel (FC) wrap tests). The FC wrap test applies only when the director is configured to operate in FICON management style.
- An internal modem for use by support personnel to dial in to the HAFM appliance for event notification and to perform remote diagnostics.
- Automatic notification of significant system events (to support personnel or administrators) through e-mail messages or the call-home feature at the HAFM appliance.

 **NOTE:** The call-home feature is not available through the EWS interface.

- An RS-232 maintenance port at the rear of the director (port access is password-protected) that enables installation or service personnel to change the director's internet protocol (IP) address, subnet mask, and gateway address.
- Redundant FRUs—logic cards, power supplies, and cooling fans—that are removed or replaced without disrupting director or Fibre Channel link operation.
- A modular design that enables quick removal and replacement of FRUs without tools or equipment.
- Concurrent port maintenance—UPM cards are added or replaced and fiber-optic cables are attached to ports without interrupting other ports or director operation.
- Beaconing to assist service personnel in locating a specific port, FRU, or director in a multi-switch environment. When port beaoning is enabled, the amber LED associated with the port flashes. When FRU beaoning is enabled, the amber (service required) LED on the FRU flashes. When unit beaoning is enabled, the system error indicator on the front bezel flashes. Beaoning does not affect port, FRU, or director operation.
- Data collection through the Element Manager on the HAFM appliance to help isolate system problems. The data includes a memory dump file and audit, hardware, and engineering logs.
- Status monitoring of redundant FRUs and alternate Fibre Channel data paths to ensure continued director availability in case of failover. The HAFM application queries the status of each backup FRU daily. A backup FRU failure is indicated by an illuminated amber LED.
- SNMP management using the Fibre Alliance management information base (MIB) 3.1, that runs on the HAFM appliance. Up to 12 authorized management workstations can be configured through the HAFM application to receive unsolicited SNMP trap messages. The trap messages indicate operational state changes and failure conditions.
- SNMP management using the Fibre Channel Fabric Element MIB 1.1, transmission control protocol/internet protocol (TCP/IP) MIB-II definition (RFC 1213), or a product-specific MIB that runs on each director. Up to six authorized management workstations can be configured through the Element Manager on the HAFM appliance to receive unsolicited SNMP trap messages. The trap messages indicate operational state changes and failure conditions.

 **NOTE:** For more information about SNMP support provided by HP products, refer to the *HP StorageWorks SNMP reference guide for directors and edge switches*.

Zoning

The director supports a name server zoning feature that partitions attached devices into restricted-access groups called zones. Devices in the same zone can recognize and communicate with each other through switched port-to-port connections. Devices in separate zones cannot communicate with each other.

Zoning is configured by authorizing or restricting access to name server information associated with device N_Ports that attach to director fabric ports (F_Ports). A zone member is specified by the port number to which a device is attached, or by the eight-byte (16-digit) World Wide Name (WWN) assigned to the host bus adapter (HBA) or Fibre Channel interface installed in a device. A device can belong to multiple zones.

△ **CAUTION:** If zoning is implemented by port number, a change to the director fiber-optic cable configuration disrupts zone operation and may incorrectly include or exclude a device from a zone.

If zoning is implemented by WWN, removal and replacement of a device HBA or Fibre Channel interface (thereby changing the device WWN) disrupts zone operation and may incorrectly include or exclude a device from a zone.

In Open Fabric mode, only zoning by WWN is supported. Zoning by port numbers is not supported.

Zones are grouped into zone sets. A zone set is a group of zones that is enabled (activated) or disabled across all directors and edge switches in a multi-switch fabric. Only one zone set can be enabled at one time.

Multi-switch fabrics

A Fibre Channel topology that consists of one or more interconnected directors or switch elements is called a fabric. Operational software provides the ability to interconnect directors (through expansion port (E_Port) connections) to form a multi-switch fabric. The data transmission path through the fabric is typically determined by fabric elements and is user-transparent. Subject to zoning restrictions, devices attached to any interconnected director can communicate with each other through the fabric.

Because a multi-switch fabric is typically complex, maintenance personnel should be aware that several factors can degrade fabric performance or cause connectivity failures. These factors include:

- **Domain ID assignment**—Each director in a fabric is identified by a unique domain ID that ranges from 1 through 31. A domain ID of 0 is invalid. If two operational fabrics join, they determine if any domain ID conflicts exist between the fabrics. If one or more conflicts exist, the E_Ports that form the interswitch link (ISL) segment to prevent the fabrics from joining.
- **Zoning**—In a multi-switch fabric is configured on a fabric-wide basis, and a change to the zoning configuration is applied to all directors and switch elements in the fabric. To ensure zoning is consistent across a fabric, the following rules are enforced when two fabrics (zoned or unzoned) join:

- **Fabric A unzoned and Fabric B unzoned**—The fabrics join successfully, and the resulting fabric remains unzoned.
- **Fabric A zoned and Fabric B unzoned**—The fabrics join successfully, and fabric B automatically inherits the zoning configuration from fabric A.
- **Fabric A unzoned and Fabric B zoned**—The fabrics join successfully, and fabric A automatically inherits the zoning configuration from fabric B.
- **Fabric A zoned and Fabric B zoned**—The fabrics join successfully only if the zone configurations can be merged. If the fabrics cannot join, the connecting E_Ports segment and the fabrics remain independent.

Zone configurations for two fabrics are compatible (the zones can join) if the active zone set name is identical for each fabric, and if zones with the same name have identical elements.


- **Port segmentation**—When an ISL activates, directors exchange operating parameters to determine if they are compatible and can join to form a single fabric. If they are incompatible, the connecting E_Port at each director segments to prevent the creation of a single fabric. A segmented link transmits only Class F traffic; the link does not transmit Class 2 or Class 3 traffic. The following conditions cause ports to segment:
 - **Incompatible operating parameters**—Either the resource allocation timeout value (R_A_TOV) or error detect timeout value (E_D_TOV) is inconsistent between directors. To prevent E_Port segmentation, the same E_D_TOV and R_A_TOV must be specified for each director.
 - **Duplicate domain IDs**—One or more domain ID conflicts are detected.
 - **Incompatible zoning configurations**—Zoning configurations for the directors are not compatible.
 - **Build fabric protocol error**—A protocol error is detected during the process of forming the fabric.
 - **No principal switch**—No director in the fabric is capable of becoming the principal switch.
 - **No response from attached switch**—After a fabric is created, each director in the fabric periodically verifies operation of all attached switches and directors. An ISL segments if a switch or director does not respond to a verification request.
 - **ELP retransmission failure timeout**—A director that exhibits a hardware failure or connectivity problem cannot transmit or receive Class F frames. The director did not receive a response to multiple exchange link protocol (ELP) frames, did not receive a fabric login (FLOGI) frame, and cannot join an operational fabric.

Hardware components

The director provides a modular design that enables quick removal and replacement of FRUs. The following sections define Director 2/64 main components.

Front view

Figure 1 shows Director 2/64 components accessible from the front of the director. Component descriptions follow the figure.

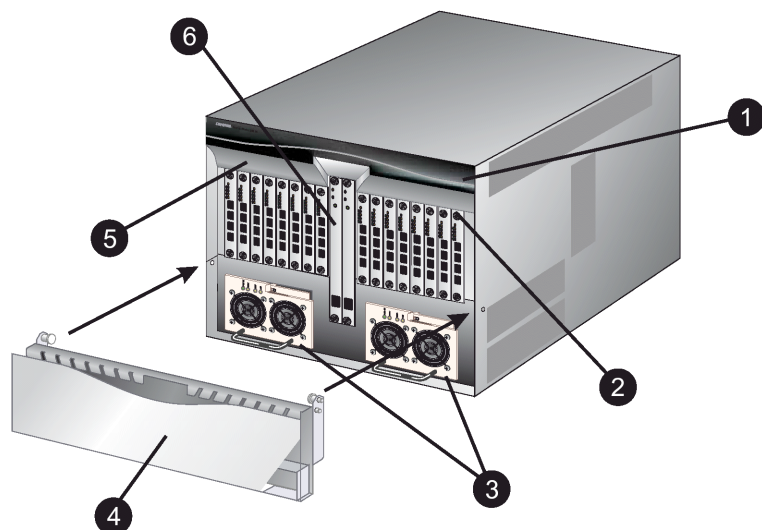

SHR-2272

- | | |
|-------------------------------|--|
| 1 Power and system error LEDs | 4 Cable management assembly ¹ |
| 2 UPM cards | 5 Front bezel |
| 3 Power supplies | 6 CTP2 cards |

1. Provided in rack-mount kits HP 9000, HP 10000, and HP 11000 Series only.

Figure 1 Director components—front

CTP2 card

The Director 2/64 ships with two Control Processor (CTP2) cards. The active CTP2 card initializes and configures the director after power on, and contains the microprocessor and associated logic that coordinate director operation. The second CTP2 card serves as a backup. A CTP2 card provides an Initial Machine Load (IML) button on the faceplate. When the button is pressed and held for three seconds, the director reloads firmware and resets the CTP2 card without switching off power or affecting operational fiber-optic links.

Each CTP2 card also provides a 10/100 megabit per second (Mbps) RJ-45 twisted pair connector on the faceplate that attaches to an Ethernet Local Area Network (LAN).

Each CTP2 card provides System Services Processor (SSP) and Embedded Port (EP) subsystems. The SSP subsystem runs director applications, communicates with director ports, and controls the RS-232 maintenance port and 10/100 Mbps ethernet port. The EP subsystem provides Class F processing, and manages frame transmission to and from the Serial Crossbar Assembly (SBAR). In addition, CTP2 cards provide non-volatile memory for storing firmware director configuration information,

persistent operating parameters, and memory dump files. Director firmware is upgraded concurrently (without disrupting operation).

Each card faceplate contains a green light emitting diode (LED) that turns ON if the card is operational and active, and an amber LED that turns ON if the card fails. The LEDs are OFF on the backup CTP2. The amber LED FLASHES if beaconing is enabled.

Front bezel

The bezel at the front of the Director includes two indicator LEDs:

- The green power LED turns ON when the director is powered on and operational. If the LED turns OFF, a facility power source, alternating current (AC) power cord, or director power distribution failure is indicated.
- The amber system error LED turns ON when the director detects an event requiring immediate operator attention, such as an FRU failure. The LED remains illuminated as long as an event is active. The LED FLASHES if unit beaconing is enabled.

Cable management assembly

The cable management assembly positioned at the front of the director provides routing for Ethernet cables attached to CTP2 cards and fiber-optic cables attached to director ports. The assembly rotates up to provide front access to the redundant power supplies.

The cable management assembly is supplied with rack-mount kits for the HP 9000, HP 10000, and HP 11000 Series racks only

Power supplies

The Director 2/64 uses redundant, load-sharing power supplies which step down and rectify facility input power to provide 48-VDC power to director FRUs. The power supplies also provide over-voltage and over-current protection. Either power supply can be replaced while the switch is powered on and operational. Each power supply has a separate backplane connection to allow for different AC power sources.

The power supplies are input rated at 85 to 264 VAC. The faceplate of each power supply provides the following status LEDs:

- A green **PWR OK** LED turns ON if the power supply is operational and receiving AC power.
- An amber **FAULT** LED turns ON if the power supply fails.
- An amber **TEMP** LED turns ON if the power supply shuts down due to an over temperature condition.
- An amber **LIM** LED turns ON if the power supply is overloaded and operating at the current limit (15.6 A).

Power supply requirements are listed in Appendix B.

UPM card

Each Universal Port Module (UPM) card provides four full-duplex generic ports (G_Ports) that transmit or receive data at 1.063 or 2.125 gigabits per second (Gb/s). G_Port functionality depends on the type of cable attachment. UPM cards use Non-Open Fiber Control (NOFC) Class 1

laser transceivers that comply with Section 21 of the Code of Federal Regulations (CFR), Subpart J as of the date of manufacture.

Depending on device connections, G_Ports work as follows:

- If the G_Port is attached to a Fibre Channel device, the port functions as a fabric port (F_Port). An F_Port is the interface on a director that connects to a device N_Port.
- If the G_Port is attached to another director to form an Interswitch Link (ISL), the port functions as an expansion port (E_Port). A multi-switch fabric is formed through multiple directors and ISLs.

Figure 2 shows the faceplate of an UPM.

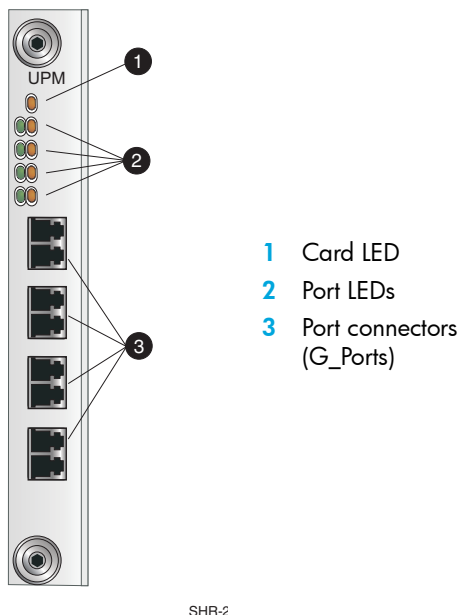



Figure 2 UPM card LEDs and connectors

Single-mode or multi-mode fiber-optic cables attach to UPM cards through small form factor pluggable (SFP) optic transceivers. The fiber-optic transceivers provide duplex connectors, and can be detached from UPM cards (through a 10-pin interface) for easy replacement. Three fiber-optic transceiver types are available:

- **Short-wave laser**—Short-wave laser transceivers provide connections for transferring data over short distances (2 to 500 meters) through 50- μ m (500 meters) or 62.5- μ m (200 meters) multi-mode fiber.


 **NOTE:** HP recommends 50- μ m fiber-optic cable for any new installation requiring multi-mode fiber.

- **Long-wave laser**—Long-wave laser transceivers provide connections for transferring data over long distances (up to 10 kilometers) through 9- μ m single-mode fiber.

- **Extended reach long-wave laser**—Long-wave laser transceivers that provide connections for transferring data over extended long distances (up to 35 kilometers) through 9- μ m single-mode fiber.

Rear view

Figure 3 shows the components accessible from the rear of the Director 2/64.

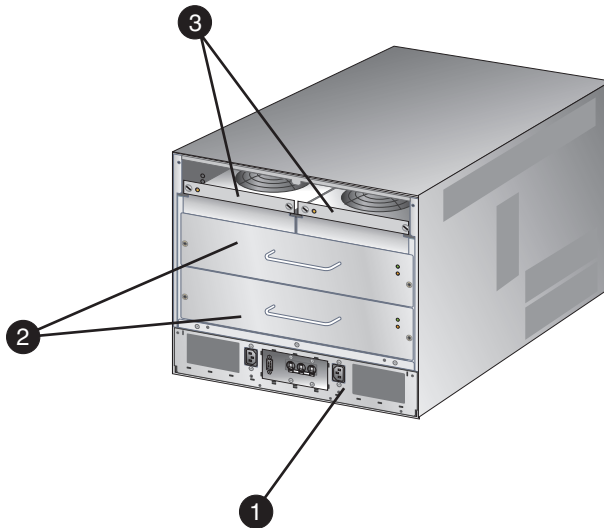

SHR-2309

- 1 Power module assembly 3 Fan modules
2 SBAR assemblies

Figure 3 Director components—rear

Fan modules

Two fan modules, each containing three fans (six fans total), provide cooling for director FRUs, as well as provide redundancy for continued operation if a fan fails.

The fan module can be replaced while the director is powered on and operating, provided the module is replaced within 10 minutes (after which software powers off the director). An amber LED for each fan module turns ON if one or more fans fail or rotate at insufficient velocity.

SBAR assembly

The director ships with two SBAR assemblies. The active SBAR is responsible for Fibre Channel frame transmission from any director port to any other director port. Connections are established without software intervention. The assembly accepts a connection request from a port, determines if a connection can be established, and establishes the connection if the destination port is available. The assembly also stores busy, source connection, and error status for each director port.

The backup SBAR takes over operation if the active assembly fails, and provides the ability to maintain connectivity and data frame transmission without interruption. The transition to the backup assembly is transparent to attached devices.

Each SBAR assembly consists of a card and steel carriage that mounts flush on the backplane. The carriage provides protection for the back of the card, distributes cooling airflow, and assists in aligning the assembly during installation. The rear of the carriage contains a green LED that turns ON if the assembly is operational and active, and an amber LED that turns ON if the assembly fails. The amber LED FLASHES if FRU beaconing is enabled.

Power module assembly

The power module assembly is located at the bottom rear of the director. The module provides the following.

- Two single-phase AC power connectors. Each connector is input rated at 85 to 264 VAC.
- A power switch (circuit breaker) that controls AC power distribution to both power supplies. The breaker is set manually, or is automatically tripped by internal software if thermal sensors indicate the director has overheated.
- A 9-pin maintenance port that provides a connection for a local terminal or dial-in connection for a remote terminal.

Tools and test equipment

This section describes tools and test equipment that may be required to test, service, and verify operation of the director and attached HAFM appliance. These tools are either supplied with the director or must be supplied by service personnel.

Tools supplied with the director

The following tools are supplied with the director. Use of the tools may be required to perform test, installation, service, or verification tasks.

- **Torque tool with hexagonal adapter**—The torque tool with 5/32" hexagonal adapter (Figure 4), is required to remove and replace director logic cards.

△ **CAUTION:** The torque tool supplied with the Director 2/64 is designed to tighten director logic cards and is set to release at a torque value of six inch-pounds. Do not use an Allen wrench or torque tool designed for use with another HP product. Use of the wrong tool may overtighten and damage logic cards.

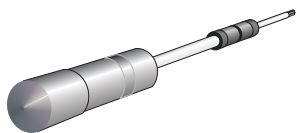


Figure 4 Torque tool and hex adapter

- **Loopback plug**—An SFP multi-mode (short-wave laser) or single-mode (long-wave laser) loopback plug (Figure 5), is required to perform port loopback diagnostic tests. One loopback

plug is shipped with the director, depending on the type of port transceivers installed. Both plugs are shipped if short-wave laser and long-wave laser transceivers are installed.

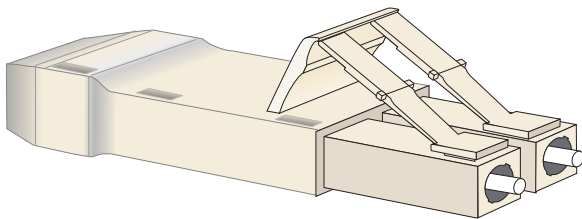


Figure 5 Loopback plug

- **Fiber-optic protective plug**—For safety and port transceiver protection, fiber-optic protective plugs ([Figure 6](#)), must be inserted in all director ports without fiber-optic cables attached. The director is shipped with protective plugs installed in all ports.

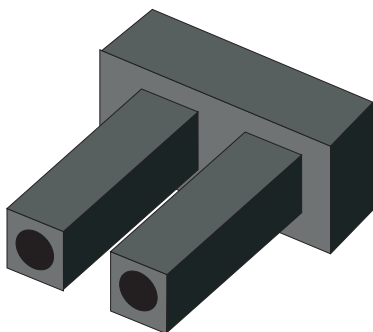


Figure 6 Fiber-Optic protective plug

- **Null modem cable**—An asynchronous RS-232 null modem cable ([Figure 7](#)) is required to configure director network addresses and acquire event log information through the maintenance port. The cable has nine conductors and DB-9 male and female connectors.

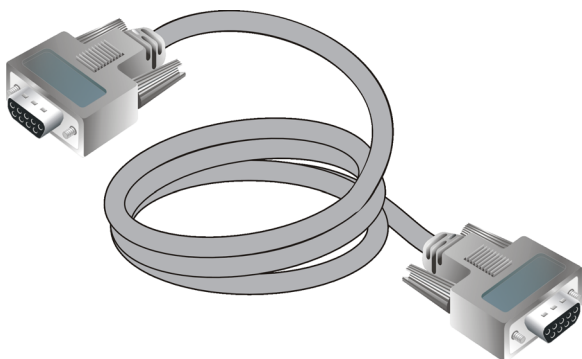


Figure 7 Null modem cable

Tools supplied by service personnel

The following tools are expected to be supplied by service personnel performing director installation or maintenance actions. Use of the tools may be required to perform one or more test, service, or verification tasks.

- **Scissors or pocket knife**—A sharp cutting edge (scissors or knife blade) may be required to cut the protective strapping when unpacking replacement FRUs.
- **Standard flat-tip and cross-tip (Phillips) screwdrivers**—Screwdrivers are required to remove, replace, adjust or tighten various FRUs, chassis, or cabinet components.
- **T10 Torx® tool**—The tool is required to rack-mount the director or to remove, replace, adjust, or tighten various chassis or cabinet components.
- **Electrostatic discharge (ESD) grounding cable with attached wrist strap**—Use of the ESD wrist strap is required when working in and around the director card cage.
- **Maintenance terminal (desktop or notebook PC)**—The PC is required to configure director network addresses and acquire event log information through the maintenance port. The PC must have:
 - The Microsoft® Windows 98®, Windows 2000®, Windows 2003®, Windows XP®, or Windows ME® operating system installed.
 - RS-232 serial communication software (such as ProComm Plus™ or HyperTerminal™) installed. HyperTerminal is provided with Windows operating systems.
- **Fiber-optic cleaning kit**—The kit contains tools and instructions to clean fiber-optic cable, connectors, loopback plugs, and protective plugs.

Optional kits

Contact your HP authorized service provider to purchase the following optional director kits. See [Table 2](#) for descriptions of Director 2/64 optional kits.

Table 2 Director optional kits

Supporting kit	Description
HP Full Volatility License. Part Number: A7498A	Provides a license to use Full Volatility feature.
HP Open Trunking License. Part Number: A7505A	Provides a license to use Open Trunking feature.
HP SANtegrity Binding License. Part Number: 317073-B21	Provides a license to use SANtegrity Binding feature.
300m Optical Transceiver Kit, Part Number: 300834-B21	Provides short-wave optical transceiver for the director.
10km Long Distance Optical Transceiver Kit, Part Number: 300835-B21	Provides 10km long-wave optical transceiver for the director.

Table 2 Director optional kits (continued)

Supporting kit	Description
35km Extended Reach Optical Transceiver Kit, Part Number: 300836-B21	Provides 35km long-wave optical transceiver for the director.
HP 9000, HP 10000, and HP 11000 Rack-Mount Kit, Part Number: 302659-B21	Provides rack-mounting hardware.
HP system/e and industry-standard 19-in rack Mount Kit, Part Number: 339227-B21	Provides rack-mounting hardware.
2Gb UPM Port Module Kit, Part Number: 316094-B21	Provides 4 additional short-wave ports for the Director 2/64.

2 Installing and configuring the director

This chapter describes tasks to install, configure, and verify operation of the director. This chapter describes the following:

- [Installation options](#), page 27
- [Review installation requirements](#), page 27
- [Unpack and inspect the director](#), page 29
- [Install the director in a rack](#), page 34
- [Unpack and inspect the director](#), page 29
- [Configure director network information](#), page 54
- [LAN-connect the director](#), page 59
- [HAFM appliance](#), page 60
- [Frequently used HAFM settings](#), page 65
- [Connecting cables to the Fibre Channel ports](#), page 87
- [Connecting the director to a fabric](#), page 88
- [Unpacking, inspecting, and installing the Ethernet hub \(optional\)](#), page 89
- [Using HAFM from a remote location](#), page 89

Installation options

The director is installed in one of the following configurations:

- **Table or desk top**—One or more directors and an optional HAFM appliance are delivered and installed at the customer facility on a desk or table top. Ethernet cabling distance and local area network (LAN) addressing issues must be considered.
- **Customer-supplied equipment rack**—One or more directors and an optional HAFM appliance are delivered to the customer facility for installation in an HP or customer-supplied equipment rack. Rack-mount hardware is provided in the shipping container. Ethernet cabling, distance, and LAN addressing issues must be considered.

Review installation requirements

The director is delivered stand-alone and ready to be mounted in an HP 9000, HP 10000, HP 11000, HP system/e, or industry-standard 19-in rack. Ethernet cabling, distance, and LAN addressing issues must be considered.

Review the following checklist before installing the switch:

- Prepare a site plan. Consult the *HP StorageWorks SAN high availability planning guide*.
- Manage the director using one of the following methods:
 - A browser-capable PC and LAN segment connectivity to the HAFM appliance to support director management through HAFM and the Element Manager.

- A browser-capable PC and Internet connectivity to support director management through the EWS interface.
- Verify that required technical personnel are available and scheduled for the installation.
- Obtain the required fiber-optic cables (multi-mode or single-mode). Verify cable length and required connectors.
- Obtain an HP 19-inch equipment rack.
- Verify that the front panel air temperature does not exceed 40 °C (104 °F) during operation.

 **NOTE:** Height measurements are sometimes described in rail units (Us). One U is 1.75 in.


- Verify that there is space in the rack. The director is 9U (15.75 in) high. In addition, 1U is required in the HP system/e and industry-standard 19-in racks for the rail tray kit. Note that the tray provides 1U of space for cable management.
- Verify that the rack is stable.
- If applicable, obtain the necessary remote workstations or Simple Network Management Protocol (SNMP) workstations. Workstations are customer-supplied and connected through a corporate or dedicated LAN.
- Verify that all other equipment installed in the rack is connected to a reliable ground connection; do not rely on connections to a branch circuit, such as a power strip.
- HP recommends securing the rack mechanically to prevent it from tipping over during a natural disaster, such as an earthquake.

Items required for installation

Locate the following items before beginning the installation procedure:

- Lift device (recommended).
- Director 2/64.
- An HP 9000, HP 10000, HP 11000, HP system/e, or industry-standard 19-in rack, or any rack with the following specifications:
 - A minimum depth of 24.5 in.
 - 19 in wide.
 - A minimum opening size of 10U available (9U for the director and 1U for the rail tray kit).
- Two power outlets or different branches (for redundancy).
- Torque driver with cross-tip bit (for setting 22 in/lb. of torque).
- Fiber-optic protective plug—For safety and port transceiver protection, fiber-optic protective plugs must be inserted in all director ports without fiber-optic cables attached. The director is shipped with protective plugs installed in all ports.
- Null modem cable—An asynchronous RS-232 null modem cable is required to configure director network addresses and obtain event log information through the maintenance port. The cable has nine conductors and two DB-9 female connectors. A null modem cable specially designed for this application is supplied with the Director 2/64.

- Standard flat-tip and cross-tip Phillips screwdrivers—required to remove, replace, adjust or tighten various FRUs, chassis, or rack components.
- Electrostatic discharge (ESD) grounding cable with attached wrist strap—required when working in and around the director card cage.
- Maintenance terminal (desktop or notebook computer)—required to configure director network addresses and acquire event log information through the maintenance port. Computer requirements include:
 - Microsoft Windows 98, Windows Millennium Edition, Windows NT 4.0, Windows 2000, or Windows XP operating system installed.
 - RS-232 serial communication software (for example, ProComm Plus or HyperTerminal).

 **NOTE:** The HAFM appliance may be used for the maintenance terminal function. The HyperTerminal application is included with the Windows 2000 operating system provided with the HAFM appliance.

Select an operating location

Install the director in a secure or limited-access area to ensure that cable connections are not compromised. Also, make sure to install the director in an area with the necessary ventilation and power requirements.

Cooling and power requirements

Two fan modules, each containing three fans (six fans total), provide cooling and redundancy fans for the director. The air intake for the director must satisfy an operating environment temperature requirement of 40°F to 104°F (4°C to 40°C).

Director power requirements:

- Input voltage: 100 to 120 or 200 to 240 VAC
- Input frequency: 50/60 Hz

△ **CAUTION:** Do not block Director 2/64 air vents. The switch uses ambient air for cooling


Unpack and inspect the director

Unpack and inspect the director as follows:

1. Inspect the shipping container for damage caused during transit.
2. Unpack the shipping cartons.

△ **WARNING!** The director weighs approximately 115 pounds. Use proper handling and lifting equipment to reduce the possibility of injury or product damage.

3. Verify carton contents (Figure 8 and Table 3) for the Director 2/64; (Figure 9 and Table 4) for the HP 9000, HP 10000, and HP 11000 Series Rack kit; and (Figure 10 and Table 5) for the HP system/e and industry-standard 19-in rack.

 **NOTE:** If any items are damaged or missing, please contact an HP authorized service provider or reseller.

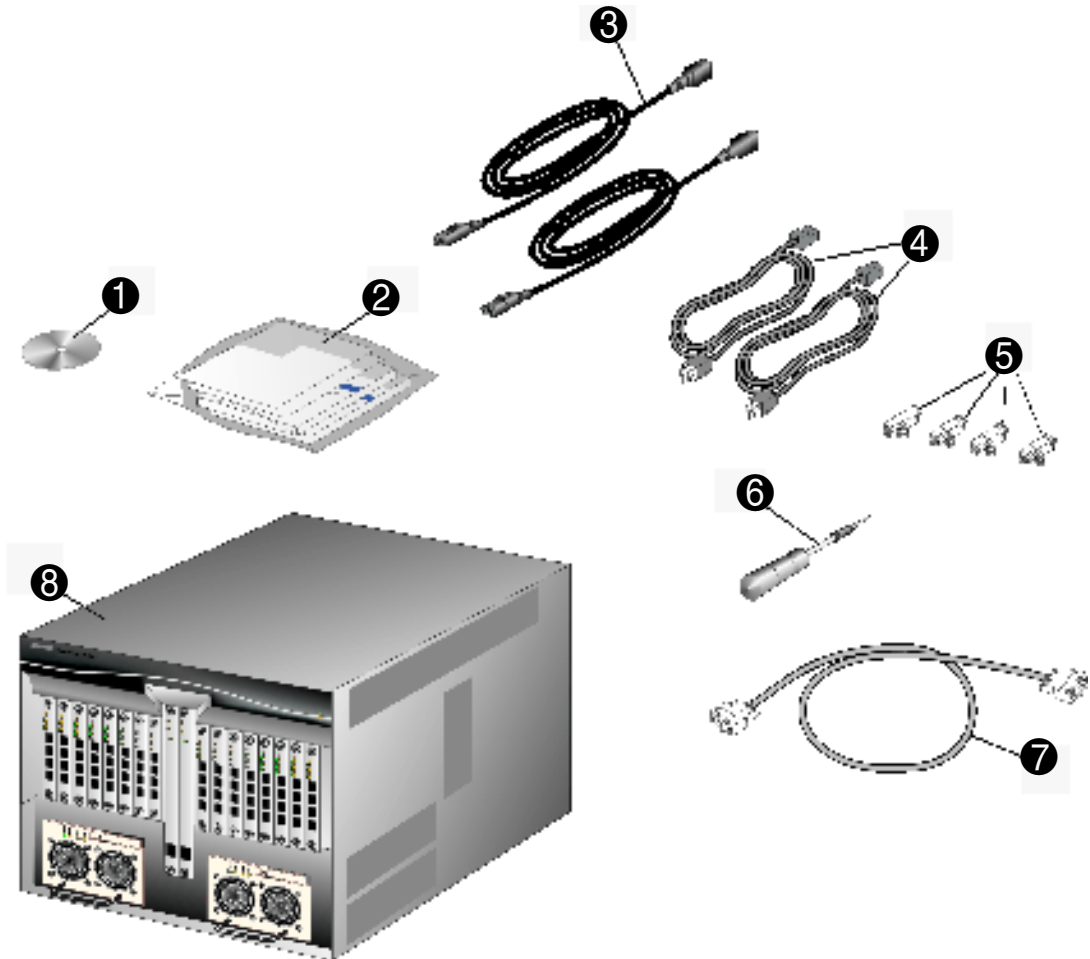


Figure 8 Carton contents for a Director 2/64

Table 3 Shipping carton contents for a Director 2/64

Number	Item
❶	One HP StorageWorks Director product CD containing firmware, license, documentation
❷	<i>HP StorageWorks Director 2/64 installation guide</i>
❸	Two Power Distribution Unit (PDU) power cords
❹	Two standard AC power cords
❺	Four multi-mode, short-wave loopback plugs
❻	One torque driver with integrated 5/32" bit
❼	One 10-foot null modem cable
❽	HP StorageWorks Director

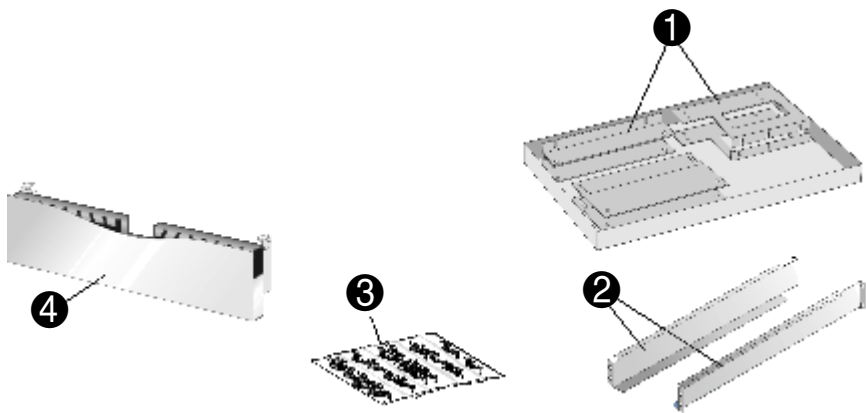


Figure 9 Carton contents for an HP 9000, HP 10000, and HP 11000 Series rack

Table 4 Shipping carton contents for an HP 9000, HP 10000, and HP 11000 Series rack

Number	Item
❶	HP 9000, HP 10000, and HP 11000 Series Rack-Mounting Kit containing: <ul style="list-style-type: none">• Two front mounting brackets• Two rear mounting plates• Two rear angle brackets
❷	Two shelf brackets
❸	Pouch containing HP 9000, HP 10000, and HP 11000 Series rack-mounting hardware: <ul style="list-style-type: none">• Eight 10-32 x 0.375 in Phillips panhead screws—Installs two shelf brackets to rails• Six 10-32 x 0.375 in Phillips panhead screws—Installs two front mounting brackets to rails• Four 10-32 X 0.25 in Phillips countersunk screws—Installs front brackets to switch• Ten 10-32 cage nuts—Secures front and rear shelf brackets.• Four 0-32 x 0.375 in Phillips panhead screws—Installs rear bracket sections• Four 10-32 X 0.25 in Phillips countersunk screws—Installs rear mounting plates to chassis• Four 10-32 X 0.375 in Phillips panhead screws—Installs two rear angle brackets• Eight square alignment washers
❹	One cable management assembly

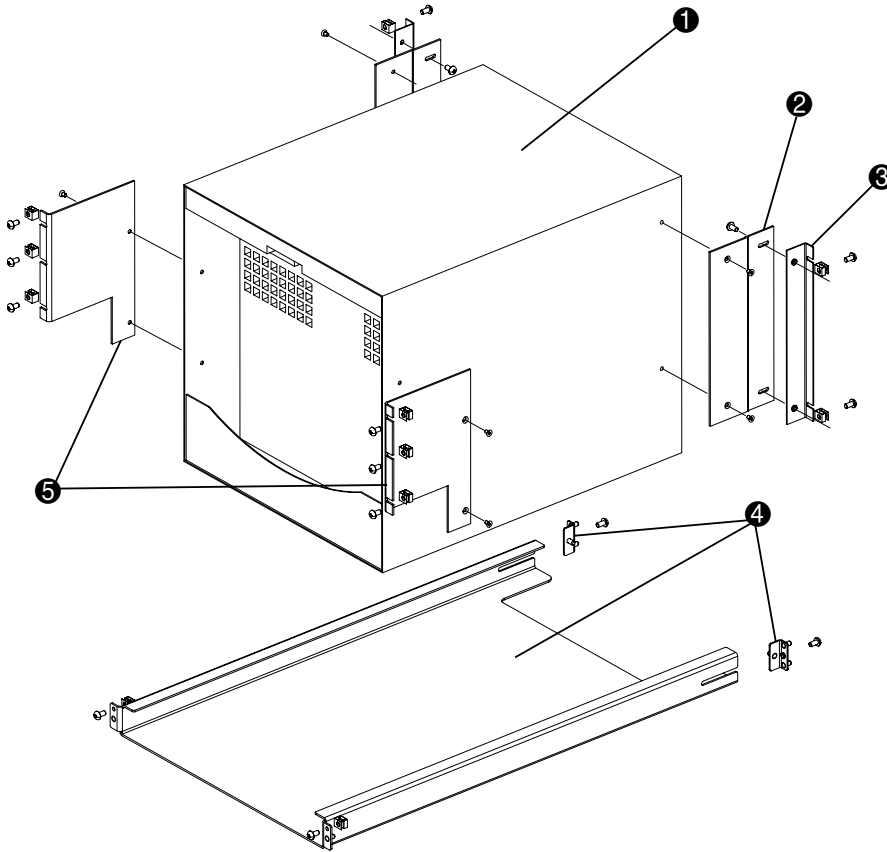


Figure 10 Carton contents for a HP system/e or industry-standard 19-in rack installation

Table 5 Parts for Installing in an HP System/e and industry-standard 19-inch rack

Label	Item
❶	HP StorageWorks Director (part number: A6534-62001)

Table 5 Parts for Installing in an HP System/e and industry-standard 19-inch rack

Label	Item
④	Rail Tray Kit (part number: A6534-60016): <ul style="list-style-type: none">• One rail tray• Two mounting brackets• Two M3 Tinnerman nuts• Four Torx T25 16 mm M5 SEM screws
②, ③, ⑤	Mounting hardware: Rack-mount brackets (part number: A6534-60014) containing: <ul style="list-style-type: none">• Two front mounting brackets (⑤)• Two rear mounting plates (②)• Two rear angle brackets (③) Switch rack hardware (part number: A6534-62002): <ul style="list-style-type: none">• Twenty-two Torx T25 16 mm M5 SEM screws (includes extras)• Eighteen sheet metal nuts• Eight 10-32 Phillips flat-head screws (includes extras)

Install the director in a rack

The following sections provide instructions for installing the director in either the HP 9000, HP 10000, and HP 11000 Series rack; or in the HP system/e and industry-standard 19-in racks.

Required tools

Obtain the following tools:

- For a HP system/e and industry-standard 19-in rack:
 - #2 Phillips screwdriver
 - Torque screwdriver
- For an HP 9000, HP 10000, and HP 11000 Series rack:
 - #2 Phillips screwdriver
 - Torx head driver T25

Tips for installing more than one switch

Review the following tips:

- Install the first director in the lowest position of the rack allocated for switches.
- If installing more than one switch, HP recommends installing an optional PDU in the bottom of the rack. HP ships two PDU power cords with the director.
- Install additional switches in position directly above one another.
- Make sure to connect power cables as you install each individual switch.

Transfer the director to the lift device

Use these steps to position the director next to the rack.

⚠ WARNING! The director weighs approximately 115 pounds. Use proper handling and lifting equipment to reduce the possibility of injury or product damage. Two people will need to work together to transfer the director to the lift. Make sure the wheels of the lift cannot roll as you transfer the director to the lift. Move the director slowly and carefully onto the lift to prevent back and hand injury. Dropping the director could injure personnel or damage the equipment.

1. Position the lift device next to the director.
2. Using a pallet jack, raise the pallet on which the director is mounted to the same height as the top surface of the lift device.
3. Slide the director across from the pallet to the lift device.
4. Determine the appropriate rack-mount position. Remember that the director is 9U (15.75 inches) high.

HP 9000, HP 10000, and HP 11000 Series rack installation

To install the director in an HP 9000, HP 10000, or HP 11000 Series rack, complete the procedures in the following sections:

- [Install the shelf brackets in a HP 9000, HP 10000, and HP 11000 Series rack](#), page 35
- [Prepare the switch for installation](#), page 36
- [Finalize the rack-mounting procedure](#), page 38

Install the shelf brackets in a HP 9000, HP 10000, and HP 11000 Series rack

📝 NOTE: Consider leaving the bottom and top U positions open to permit easy accessibility to the cables entering and exiting the rack.

Use these steps to install the two shelf brackets in the rack.


1. Determine the appropriate placement for the switch inside the rack. It is important to consider the number of switches you intend to install.
2. Locate the small, round marker hole on the rails that coincides with the location selected in [step 1](#). Each marker hole delineates the beginning of one rail unit, or U.
3. Locate the square opening in the rail that corresponds with the appropriate marker hole ([Figure 11](#)).
4. Position the higher, shelf bracket threaded hole in this square opening ([Figure 11](#)).
5. Orient the shelf bracket in the rails.
6. Place the square washer provided on the front of the rail so that the two bumps on the washer sit in opposite corners in the rail's square hole.
7. Insert the panhead Phillips screw, and partially tighten to temporarily stabilize the bracket.

8. Make sure the shelf bracket is level, and align the rear of the shelf bracket with the appropriate position on the rear rail (Figure 11).
9. Repeat step 4 through step 7 for the rear end of the shelf bracket.
10. Repeat step 1 through step 9 for the second shelf bracket.
11. Completely tighten all screws attaching shelf brackets to the rack's rails.
12. Using a torque driver, torque the screws to 22 in/lb.

Prepare the switch for installation

The following section describes how to install the mounting hardware that attaches the switch to the rails. This hardware includes:

- Two front mounting brackets
- Two rear mounting plates
- Ten cage nuts
- Eight screws

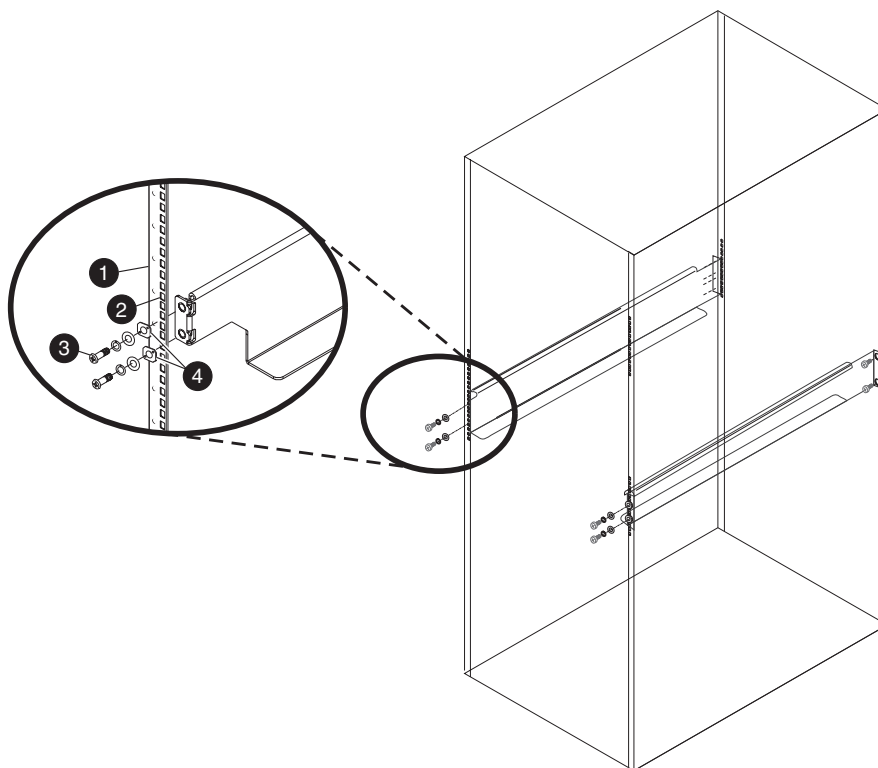

SHR-2265B

- | | | | |
|---|------------------------|---|---|
| 1 | Marker hole | 3 | Screws with captive lock and flat washers |
| 2 | Square opening in rail | 4 | Square alignment washers |


Figure 11 Securing shelf brackets

Secure the mounting hardware

Use these steps to secure the mounting hardware to the switch.

1. Locate the two front mounting brackets in the shipping carton.
2. Secure the front mounting brackets on either side of the switch (Figure 12).

For each front mounting bracket, use the two (2) flathead countersunk Phillips screws (10-32 x 0.25 in) provided.

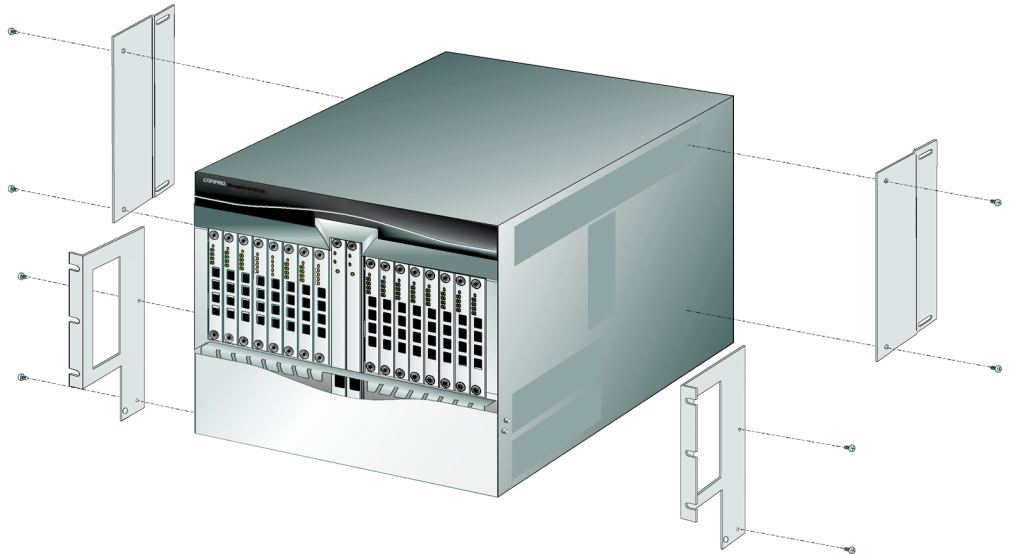

SHR-2264

Figure 12 Securing the two mounting brackets

3. Using a torque driver, torque the screws to 22 in/lb.
4. Locate the two (2) rear mounting plates in the shipping carton.
5. Secure the two (2) rear mounting plates to each side of the switch (Figure 12). For each plate, use the two (2) flathead countersunk Phillips screws (10-32 x 0.25 in) provided.
6. Using a torque driver, torque the screws to 22 in/lb.

Insert the cage nuts

The following sections describe instructions for inserting front and rear cage nuts in the rack.

Insert the front cage nuts in the rack

Use these steps to insert the six supplied cage nuts in the rack's front rails:

1. Select one of the front rails.
2. Count up eleven (11) square openings from the top screw of the shelf bracket, and insert the first of three (3) cage nuts.

3. Count up five (5) square openings from the cage nut you just installed, and insert the next cage nut.
4. Count up four (4) square openings and install the third cage nut.
5. Repeat this procedure to install cage nuts in the corresponding front rail.

Insert the rear cage nuts in the rack

Use these steps to insert the four (4) supplied cage nuts in the rack's rear rails:

1. Select one of the rear rails.
2. Count up six (6) square openings from the top screw of the rear shelf bracket. Insert the first of two (2) cage nuts.
3. Count up sixteen (16) square openings from the cage nut you just installed, and insert the next cage nut.
4. Repeat this procedure to install cage nuts in the corresponding rear rail.

Finalize the rack-mounting procedure


Use the following sections to complete the installation procedure.

After completing the steps outlined in the previous sections, prepare to orient the switch in the rack as follows.

⚠ WARNING! The director weighs approximately 115 pounds. Use proper handling and lifting equipment to reduce the possibility of injury or product damage.

1. Carefully lift the switch into the front of the rack and onto the shelf brackets and slide the switch forward into the rack until the edge of the rear mounting plates are approximately 1 inch from the rack's rails ([Figure 13](#)).
2. Align one rear angle bracket with the cage nuts installed earlier.

 **NOTE:** Ensure that the angle bracket is in contact with the outside surface of the mounting plate.

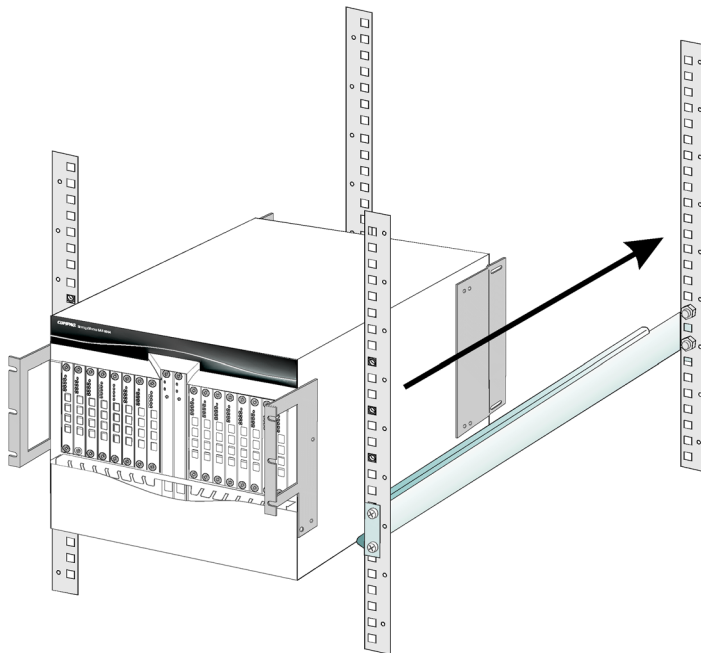


SHR-2266

Figure 13 Aligning the switch in the rack

3. Loosely attach the rear angle bracket to the rack rail with the two panhead Phillips screws provided (Figure 14).
4. Repeat [step 2](#) and [step 3](#) for the corresponding rear angle bracket (Figure 14).
5. The two rear angle brackets now touch the outside surfaces of the rear mounting plates. Slide the switch all the way into the rack to where the front mounting bracket meets the rack rails.
6. If you are certain that the hardware lines up properly, secure the hardware as follows:
 - a. Secure each rear mounting plate to the rear angle bracket with the two screws provided.


- b. Move to the front of the switch and secure each front mounting bracket with the three screws provided.

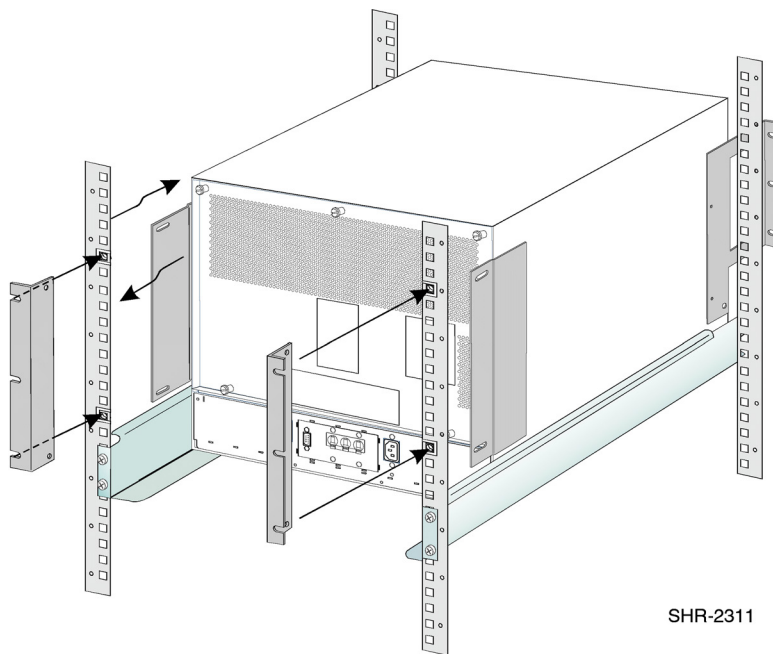


SHR-2311


Figure 14 Securing the rear angle brackets

7. Using a torque driver, torque the screws to 22 in/lb.
8. Connect the remaining ends of the PDU power cords to separate PDUs (if installed), as shown in [Figure 15](#); otherwise, connect the two standard AC power cords.

 **NOTE:** HP recommends installing an optional PDU in the rack. HP ships two PDU power cords with the director.

 **WARNING!** HP power cords are provided for each director power supply. To prevent personal injury by electric shock, use only the supplied power cords. Also, verify that the facility power receptacle is the correct type, supplies the required voltage, and is properly grounded.

9. Connect the equipment rack power cords to separate (for redundancy) facility power sources, providing single-phase, 120 to 240 VAC current.

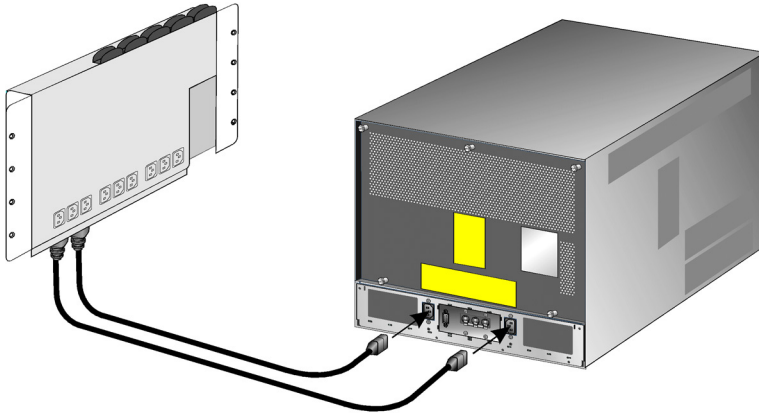

SHR-2273

Figure 15 AC power connections

HP system/e and industry-standard 19-inch rack installation

To install the director in a HP system/e or industry-standard 19-in rack, complete the procedures in the following sections:

- [Install the anti-tip feet on an HP system/e rack](#), page 41
- [Install mounting bracket hardware in the rack](#), page 42
- [Prepare the front and rear rack columns](#), page 45
- [Prepare the switch for installation](#), page 47
- [Finalize the rack-mounting procedure](#), page 48
- [Sliding shelf installation—for an HAFM appliance only](#), page 50
- [Recommended cable management](#), page 53

Install the anti-tip feet on an HP system/e rack

Use the following procedure to mount anti-tip feet on a HP system/e rack only ([Figure 16](#)):

1. Place the anti-tip feet (●), provided in the HP system/e and industry-standard 19-in rack-mount kits on the front and rear of the rack base.
2. Secure the anti-tip feet (●) to the base of the rack (front and rear).

3. Lower the rack feet (2) until they touch the floor.

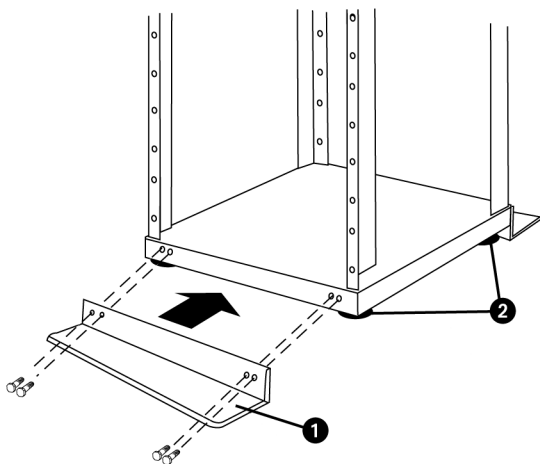




Figure 16 Mounting anti-tip feet for a HP system/e rack

Install mounting bracket hardware in the rack

Use these steps to install the mounting hardware in a rack.

 **NOTE:** The nine Us used to mount the switch are called U1 through U9; U1 is the lowest of the nine Us. Note also that one U below the switch is required for the rail tray for a total of 10Us to mount the switch.

1. Determine the appropriate placement for the switch inside the rack. It is important to consider the number of switches you intend to install.
 2. Determine the mounting location for the rail tray ([Figure 17](#)).
-

 **NOTE:** The rail tray will be mounted 1U below the switch. Because the switch should be mounted no higher than U11, the tray should be mounted no higher than U10. Make sure there are at least 2Us above the top of the switch empty for the sliding shelf.

3. Locate the rail tray and two rail tray brackets in the shipping carton.

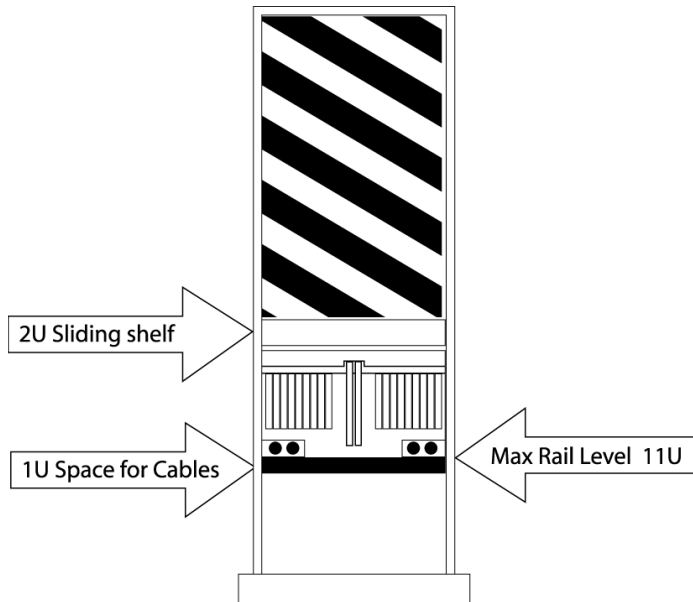


Figure 17 Rail tray mounting location requirement

4. Position and attach both rear brackets (Figure 18):
 - a. Locate the lowest U of the 9Us chosen for mounting the switch (the lowest being U1).
 - b. Attach each rear rail tray bracket to the rear rack uprights at U1 (one on the left and one on the right).
 - c. Secure each rail tray bracket using one M5 Torx screw.


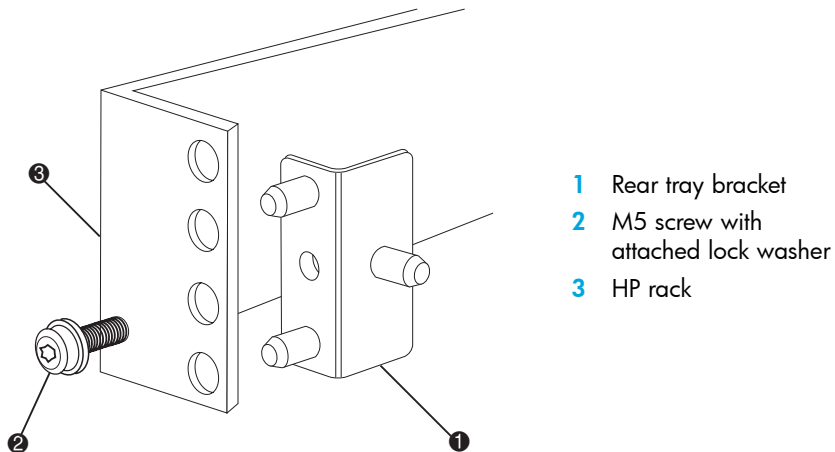


Figure 18 Attaching a rear rail tray bracket


5. Install a Tinnerman nut in the top holes of U1 for both the left and right rack-front uprights (Figure 19).

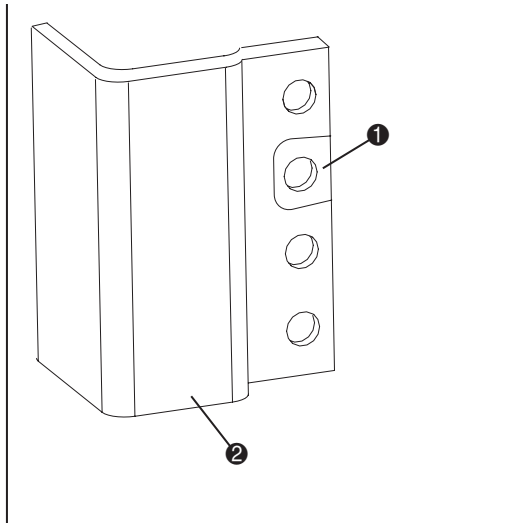

- 1 Tinnerman nut
- 2 Outer surface of HP rack

Figure 19 Installing a Tinnerman nut on the rack-front rail in U1

6. Position the rail tray (Figure 20) and insert the tray into the rack from the front.

 **NOTE:** Ensure the slots in the sides of the rail tray slide over the posts on the rear rail tray brackets, and the posts on the rail tray's front mounting flanges are inserted into the center holes of U1.

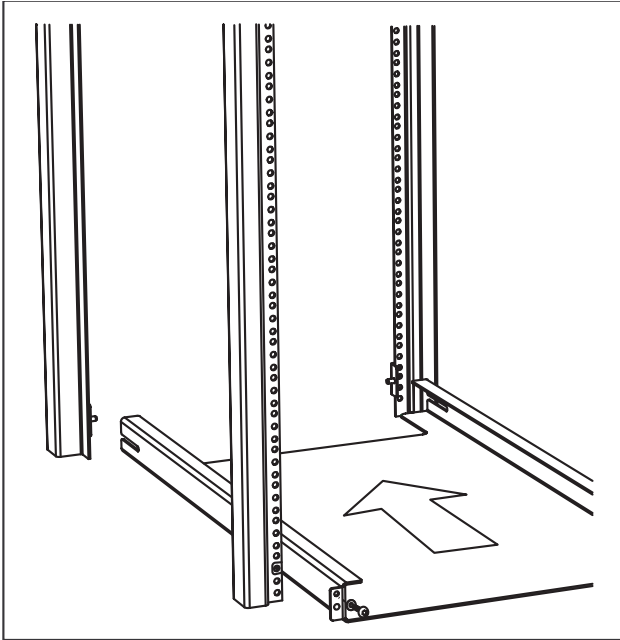


Figure 20 Inserting the rail tray in the rack

7. Secure the rail tray:
 - a. Insert an M5 Torx screw through the top holes in both of the rail tray mounting flanges. The screws pass through the holes in the rack uprights and thread into the Tinnerman nuts installed on the rack uprights in [step 5](#).
 - b. Tighten both M5 Torx screws.

Prepare the front and rear rack columns

Use the following procedure to prepare the rack for installing a switch:

1. Prepare the front rack columns ([Figure 21](#)):
 - a. Standing at the front of the rack, count up from the top of the rail tray (❶) to the 13th, 19th, and 23rd holes on the rack's front face.
 - b. Slide a sheet metal nut (❷) on each of the located holes.

 **NOTE:** Three sheet metal nuts should be on each front column face (③).

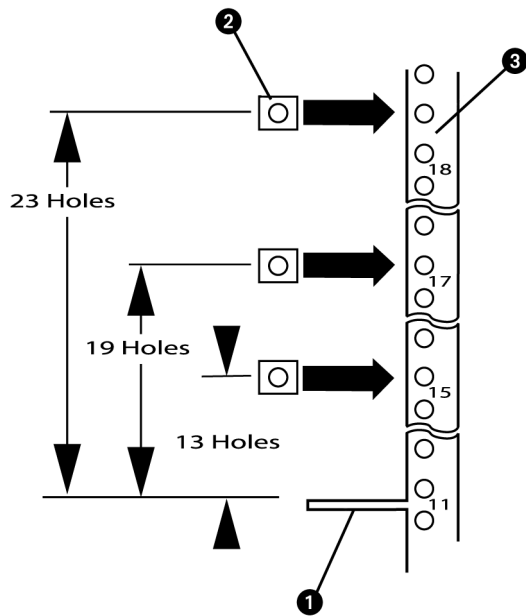



Figure 21 Preparing the front rack columns

2. Prepare the rear rack columns (Figure 22):

- a. Standing at the back of the rack, count up from the top of the rail tray (①) to 12th and 28th on the rack's back face.
- b. Slide a sheet metal nut (②) on each of the located holes.

 **NOTE:** Two sheet metal nuts should be on each back column face (③).

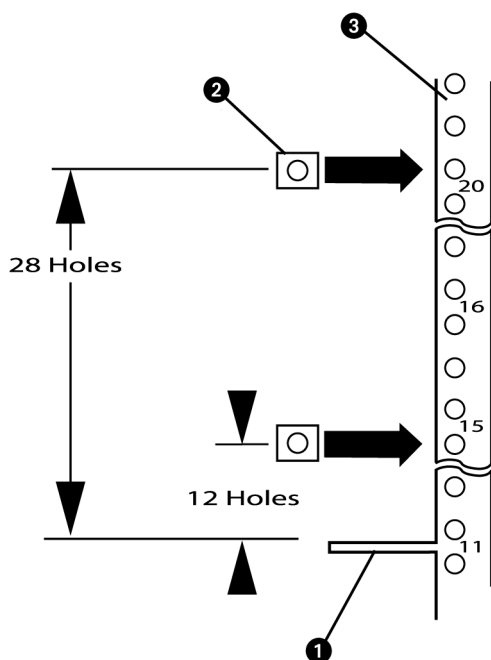


Figure 22 Preparing the rear rack columns

Prepare the switch for installation

The following section describes how to install the mounting hardware that attaches the switch to the rails. This hardware includes:

- Two front mounting brackets
- Two rear mounting plates
- Eight 10-32, flat-head Phillips screws

Use these steps to secure the mounting hardware to the switch ([Figure 23](#)):

1. Locate the two front mounting brackets in the shipping carton.
2. Position the front mounting bracket (⑤) so that the bracket's angled side faces out and is on the upper part of switch side.
3. Attach the bracket with 10-32, flat-head Phillips screws (④) using the two center threaded holes on the front side of the switch.

4. Repeat [step 2](#) and [step 3](#) for the second front mounting bracket.

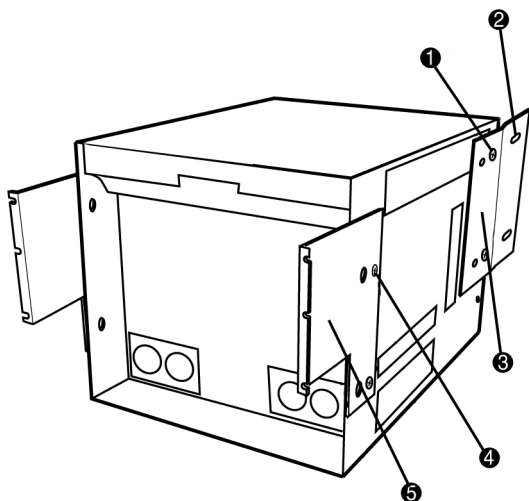


Figure 23 Installing the rack-mounting brackets on the switch


5. Locate the two rear mounting brackets in the shipping carton.
6. Position a rear mounting bracket (3) so that the bracket's center holes (1) line up with the 1st and 3rd threaded holes on the back portion of the switch side.

 **NOTE:** The slotted end (2) of the bracket should face toward the back of the switch.

7. Secure the rear mounting bracket to the switch using two 10-32, flat-head Phillips screws.
8. Repeat [step 6](#) and [step 7](#) for the second rear mounting bracket.

Finalize the rack-mounting procedure

Use the following sections to complete the installation procedure.

 **WARNING!** The director weighs approximately 115 pounds. Use proper handling and lifting equipment to reduce the possibility of injury or product damage.

1. Carefully position the switch in the front of the rack and onto the rail tray, and slide the switch back on the rails until the front mounting brackets are against the front rack columns. [Figure 24](#) illustrates using a lifting jack to position the switch.

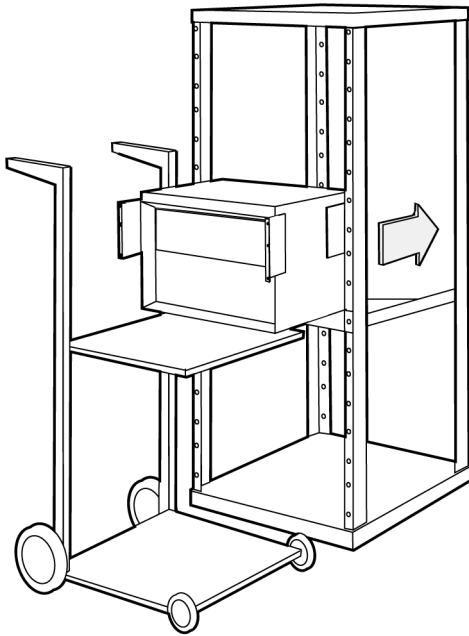


Figure 24 Positioning the switch in the rack

2. Mount the switch in the rack ([Figure 25](#)):
 - a. On one side at the back of the switch, position an angle bracket (2) so that the threaded holes (1) are against the slots (5) of the rear mounting bracket and the angled side face out.
 - b. Insert the screws (6) through the rear mounting bracket slots into the threaded nuts of the angle bracket.
 - c. Insert a second set of screws (4) through the angle bracket and the rail column into the sheet metal nuts on the back rail (3).
 - d. Repeat [step 2a](#) through [step 2c](#) for the other side at the back of the switch.
 - e. At the front of the rack, insert the screws through the front mounting brackets into the sheet metal nuts installed in the rail columns in [step 1](#) of "Prepare the front and rear rack columns" on page 45.

- f. Tighten all screws.

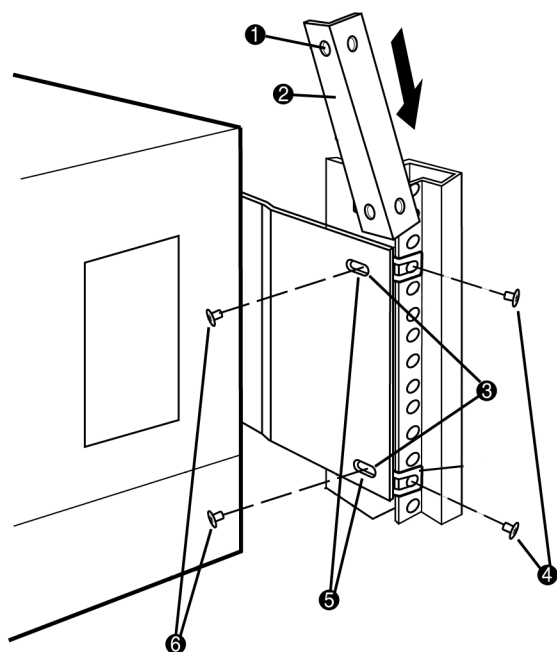


Figure 25 Securing the switch to the rack

3. At the front of the rack, insert the screws through the front mounting brackets into the sheet metal nuts installed in the rail columns in [step 1](#) of AC power connections

⚠ WARNING! HP power cords are provided for each director power supply. To prevent personal injury by electric shock, use only the supplied power cords. Also, verify that the facility power receptacle is the correct type, supplies the required voltage, and is properly grounded.

4. Connect the equipment rack power cords to separate (for redundancy) facility power sources, providing single-phase, 120 to 240 VAC current.

Sliding shelf installation—for an HAFM appliance only

This section only applies to a Management Station. Use the following procedure to install sliding shelf brackets ([Figure 26](#)):

1. Select a U slot above the switch. (HP recommends the U slot immediately above the switch. However, other U slots above the switch may also be used.)
2. On each rack rear column, locate the hole (1) that is 2 holes up from the EIA number of the selected U slot (3).
3. Line up this hole with the threaded hole on the sliding shelf bracket's side.
4. Using a screw (2), attach bracket (5) to the rack.

5. Attach another screw (4) loosely in the hole on the inside face of the mounting bracket (5).

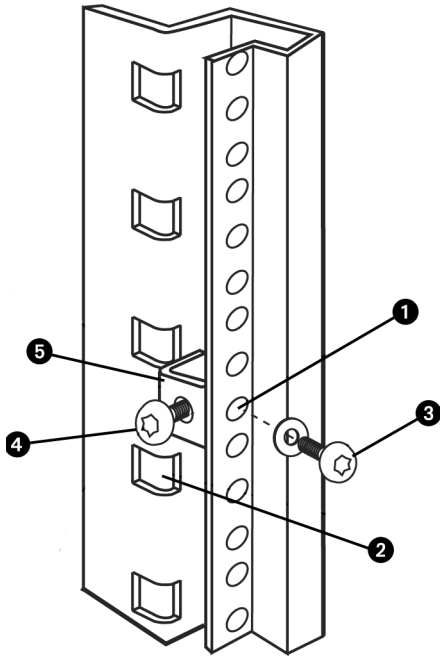


Figure 26 Installing the sliding shelf brackets

6. Insert the shelf into the rack so that both rail rear slots (❶) slide over the loose screws (❷) on the inside face of each bracket (Figure 27).

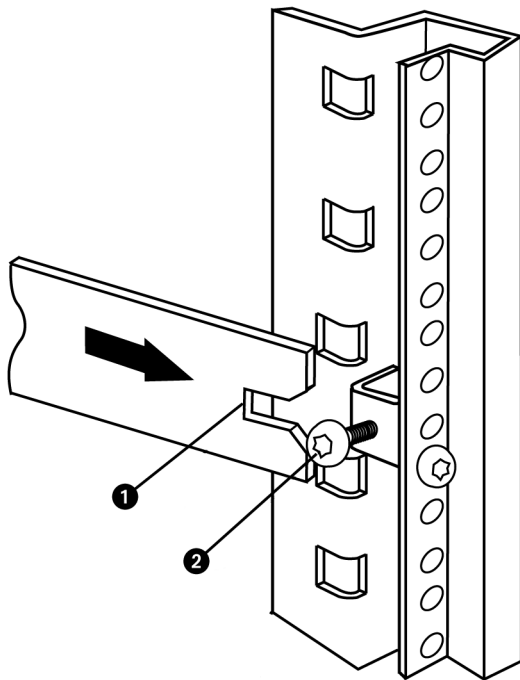


Figure 27 Positioning the sliding shelf bracket on a rail rear slot

7. Make sure that the sliding shelf and rails are horizontal (Figure 28) at the rack front.
8. Push each of the rail front tabs (❶) into the corresponding holes on the rack columns (❷).

9. At the back of the rack, tighten the screws that attach the sliding shelf rails to the mounting brackets (Figure 27 ②).

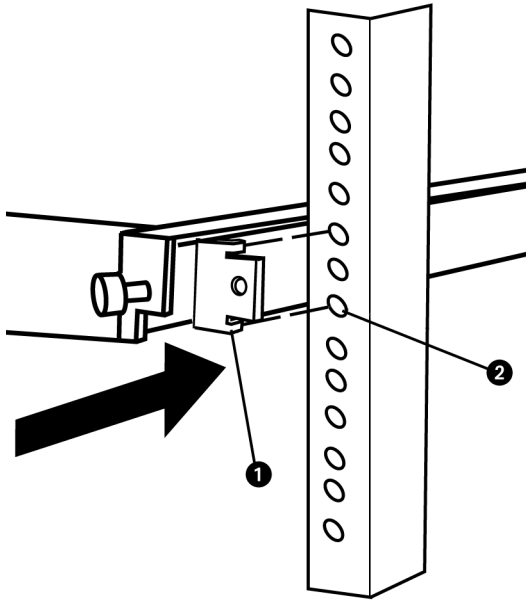


Figure 28 Positioning the sliding shelf bracket at the rack front

Recommended cable management

Perform the following procedure after installing a switch (Figure 29):

1. Install two cable restraints (①) on each side of the rack in positions that will hold the Fibre Channel cables away from the power supply.
2. Form loose bundles of the installed Fibre Channel cables (②) on each side of the rack.

3. Wrap the cable bundles with the cable restraints (❶) in two positions on each side of the rack to maintain clearance for power supply access (❸).

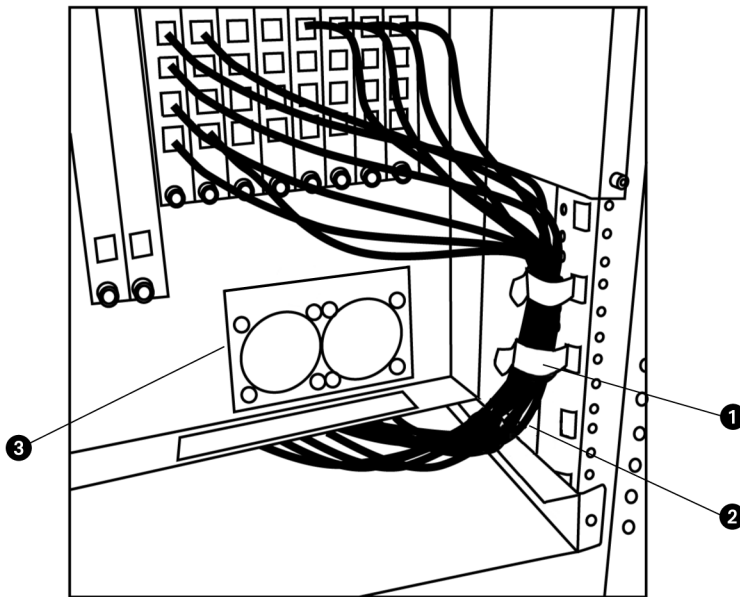


Figure 29 Recommended cable management

Power-on self test

Use the following steps to run a Power-on self test (POST):

1. Power on the PDUs (if used).
2. At the bottom rear of the director, set the power switch (circuit breaker) to the Up position.
The director powers on. The following occurs during POST:
 - Amber LEDs on both CTP2 cards and all UPM cards illuminate momentarily.
 - The green LED on each CTP2 card (active and backup) turns ON as the card is tested and UPM cards are tested.
 - Green LEDs associated with Fibre Channel ports sequentially illuminate as the ports are tested.
3. After successful POST completion, the green power LED on the front bezel, green LED on the active CTP2 card, and green PWR OK LEDs on both power supplies remain ON.
4. If a POST error or other malfunction occurs, refer to the *HP StorageWorks Director 2/64 service manual*.


Configure director network information

Use the following sections to configure the director's network addressing scheme.

Default settings

The director is delivered with the following default network addresses:

- **MAC address**—The Media Access Control (MAC) address is programmed into FLASH memory on the CTP2 card at the time of manufacture. The address is in xx.xx.xx.xx.xx.xx format, where xx is a hexadecimal pair.
- **IP address**—The factory preset, default IP address is 10.1.1.10. If the Reset Configuration option is selected from HAFM, the director resets to the default address of 10.1.1.10. If multiple directors are installed on the same LAN, each director (and appliance) must use a unique IP address. One director can use the factory-set address, but the addresses of the remaining directors require change.

 **NOTE:** If multiple directors and the HAFM appliance are delivered in an HP-supplied equipment cabinet, all devices are configured with unique IP addresses that do not require change. The addresses require change only if multiple equipment cabinets are LAN-connected.

- **Subnet mask**—The subnet mask is 255.0.0.0. If the director is installed on a complex public LAN with one or more routers, the address may require change.
- **Gateway address**—The gateway address is 0.0.0.0. If the director is installed on a dedicated LAN with no connection through a router, the address does not require change. If the director is installed on a public LAN (corporate intranet), the gateway address must be changed to the address of the corporate intranet's local router.

Verify the type of LAN installation with the customer's network administrator. If one director is installed on a dedicated LAN, network addresses must be verified but do not require change.


Changing the director's IP address

If multiple directors are installed, or a public LAN segment is used, network addresses must be changed to conform to the customer's LAN addressing scheme. The following items are required to perform this task:

- A local workstation (desktop or notebook computer) with:
 - Microsoft Windows 98, Windows 2000, Windows 2003, Windows XP, Windows Millennium Edition, or Windows NT 4.0 operating system
 - RS-232 serial communication software (for example, ProComm Plus or HyperTerminal)Note that the HAFM appliance may be used for this function and that HyperTerminal is included in Windows 2000 provided in the HAFM appliance.
- An asynchronous RS-232 null modem cable (supplied with the Director 2/64)

Use the following steps to verify or change (if required) a director IP address, subnet mask, or gateway address:

1. Remove the protective cap from the 9-pin maintenance port at the rear of the director (a flat-tip screwdriver may be required). See [Figure 30](#) ①.

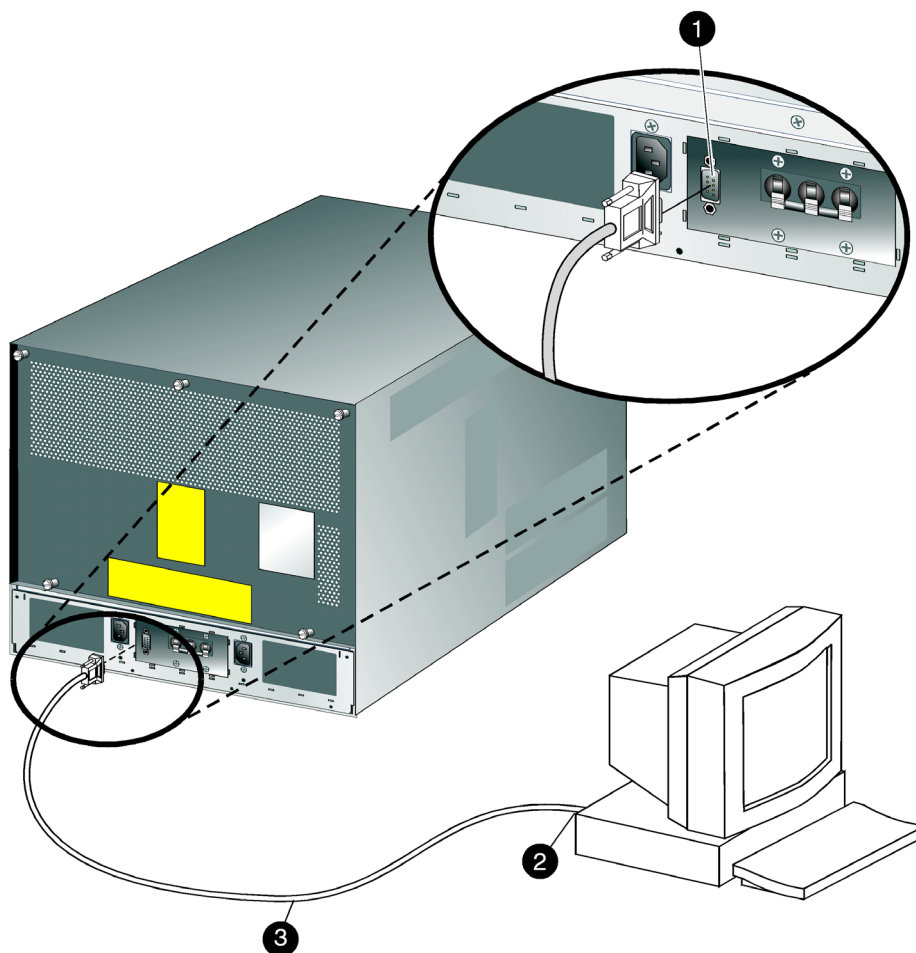

SHR-2283

- 1 Maintenance port
- 2 RS-232 port
- 3 Null Modem cable

Figure 30 Connecting the null modem cable between the director and a workstation

2. Connect the 9-pin end of the RS-232 modem cable to the maintenance port.
3. Connect the other cable end to a 9-pin communication port (COM1 or COM2) at the rear of the local workstation.
4. Select **Start > Programs > Accessories > Communications > HyperTerminal**.

The Connection Description dialog box appears (Figure 31).



Figure 31 Connection Description dialog box

5. Enter **264** in the Name box and click **OK**.
The Connect To dialog box appears (Figure 32).



Figure 32 Connect To dialog box

6. Ensure the Connect using box displays COM1 or COM2 (depending on the serial communication port connection to the director) and click **OK**.
The COMn Properties dialog box appears (Figure 33).

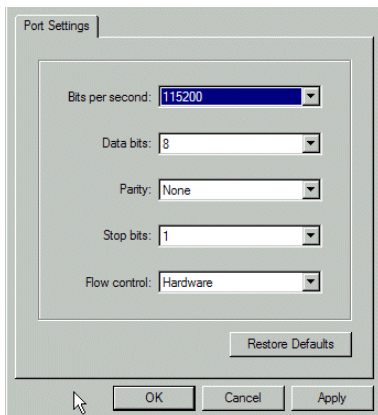


Figure 33 COMn Properties dialog box

7. Configure the Port Settings parameters as follows:

- Bits per second: 115200
- Data bits: 8
- Parity: None
- Stop bits: 1
- Flow control: Hardware

8. Click **OK**.

The HyperTerminal window appears.

9. At the > prompt, enter the user-level password (the default is password) and press **Enter**. The password is case-sensitive.

The HyperTerminal window appears with a C> prompt at the top of the window (Figure 34).

10. At the C> prompt, enter **ipconfig** and press **Enter**.

The HyperTerminal window lists the following:

- MAC Address
- IP Address (default is 10.1.1.10)
- Subnet Mask (default is 255.0.0.0)
- Gateway Address (default is 0.0.0.0)
- Auto Negotiate
- Speed
- Duplex

Only the IP Address, Subnet Mask, and Gateway Address fields are configurable.

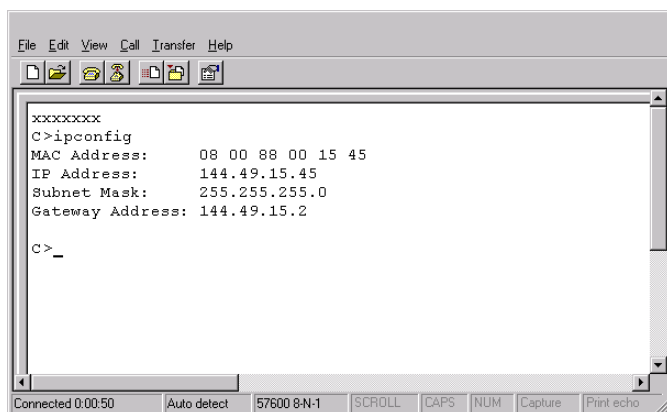


Figure 34 HyperTerminal window

11. To change director network addresses, enter the following at the C> prompt:

ipconfig xxx.xxx.xxx.xxx.yyy.yyy.yyy.yyy.zzz.zzz.zzz.zzz

The IP address format is xxx.xxx.xxx.xxx. The subnet mask format is yyy.yyy.yyy.yyy.

The gateway address format is zzz.zzz.zzz.zzz. The octets xxx, yyy, and zzz are decimals from 0 through 255. If a network address is to remain unchanged, enter the current address in the respective box.

12. Press **Enter**.

When the new network addresses are configured at the director, the message `Request completed OK` appears at the bottom of the HyperTerminal window.

13. Select **Exit** from the File menu.

A HyperTerminal dialog box appears (Figure 35).

 


Figure 35 HyperTerminal dialog box (1)

14. Click **Yes**.

A second HyperTerminal dialog box appears (Figure 36).

 


Figure 36 HyperTerminal dialog box (2)

15. Click **No** to exit and close the HyperTerminal application.

16. Power off the maintenance terminal:

- a. Select **Start > Shut Down**.

The Shut Down Windows dialog box appears.


- b. Select **Shut down** and then click **OK** to power off the PC.

17. Disconnect the RS-232 null modem cable from the director and the maintenance terminal.
Replace the protective cap over the maintenance port.

LAN-connect the director

Use these steps to connect the rack-mounted director to the Ethernet LAN segment.

1. Connect one end of an Ethernet cable to the RJ-45 connector on each CTP2 card (Figure 37).

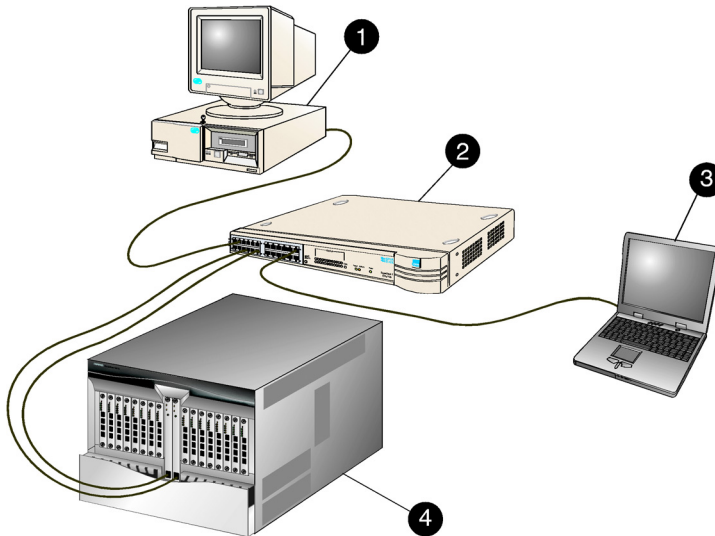


SHR-2275

- | | |
|--|---|
| 1 Remote workstation | 3 HAFM appliance (laptop or rack-mount) |
| 2 Ethernet hub or switch (customer supplied) | 4 Director 2/64 |

Figure 37 LAN-connect the director

2. Connect the remaining end of each Ethernet cable to the LAN as directed by the customer's network administrator.

 **NOTE:** If an HAFM appliance is not available, use the Embedded Web Server (EWS) interface. Attach the Ethernet LAN segment to an Internet connection.

HAFM appliance

To run HAFM software, you must set up and configure the HAFM appliance. Refer to the *HP StorageWorks HA-Fabric Manager appliance installation guide* for instructions on:

- Setting up the HAFM appliance
- Connecting the HAFM appliance to the LAN
- Configuring the network addresses and passwords for the HAFM appliance
- Setting HAFM appliance date and time
- Configuring and enabling event notification features
- Creating HAFM user names and passwords

Enabling HAFM to manage the director

A new director must be recognized by the HAFM application to be managed. Follow these steps to enable HAFM to recognize a new director:

- 1. At the HAFM application, select **Discover > Setup**.
The Discover Setup dialog box appears (Figure 38).

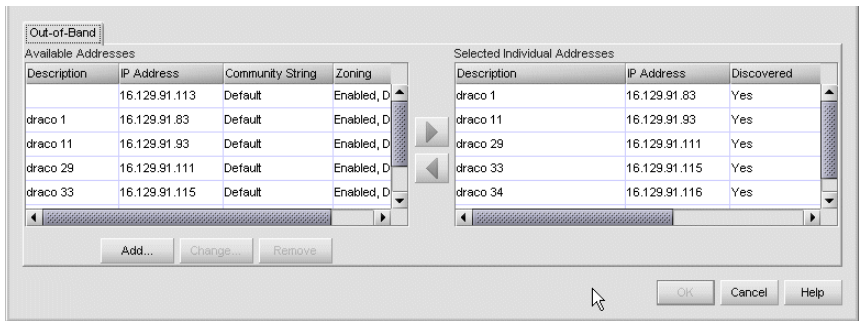


Figure 38 Discover Setup dialog box

- 2. Click **Add**.
The Domain Information dialog box appears with the IP Address page open (Figure 39).

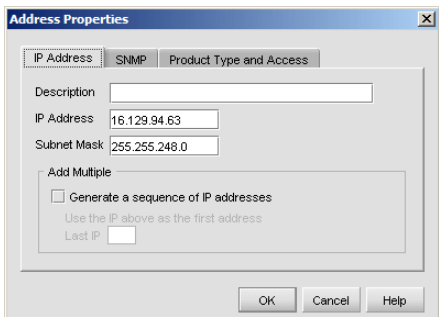



Figure 39 Domain Information dialog box (IP Address page)

- 3. Enter a director description in the Description box.
- 4. Enter the IP address you configured earlier. See “Configure director network information” on page 54.
- 5. Enter the director subnet mask (determined by the customer network administrator) in the Subnet Mask box.
- 6. If you want to generate a sequence of IP addresses, perform the following:
 - a. Select the **Generate a sequence of IP addresses** box.
 - b. Enter the last IP address in the Last IP box.

 **NOTE:** All IP addresses in a sequence must be on the same subnet and have the same first three octets.


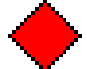

7. Click **OK**.

Verify communication between the director and HAFM appliance

Follow these steps to check director-to-server communication:

1. At the HAFM application main window (physical map or product list), inspect the shape and color of the status symbol associated with the director icon. [Table 6](#) explains these symbols.

Table 6 Director operational states and symbols

Operational state	Symbol
Operational —Director-to-server communication has been established, the director is operational, and no failures are indicated.	No status symbol
Degraded —Director-to-server communication has been established, but the director is operating in degraded mode and requires service. This condition is typical if a port or redundant FRU fails. Go to step 2 .	
Failed —Director-to-server communication has been established, but the director failed and requires immediate service. Go to step 2 .	
Status Unknown —The director status is unknown because of a network communication failure between the director and HAFM appliance. Go to step 2 .	

2. Right-click the **Director 64** icon. A pop-up menu for the selected director appears.
3. Check director status at the Hardware View page ([Figure 40](#)), and complete one of the following steps:
 - If the director is displayed as operational (no FRU alert symbols), go to "Configuring feature key" on page 86.
 - If director operation is displayed as degraded or a director failure is indicated (FRU alert symbols and a yellow triangle or red diamond at the alert panel), refer to the *HP StorageWorks Director 2/64 service manual*.

In the example, the director's status is operational as indicated by the green circle in the alert panel.

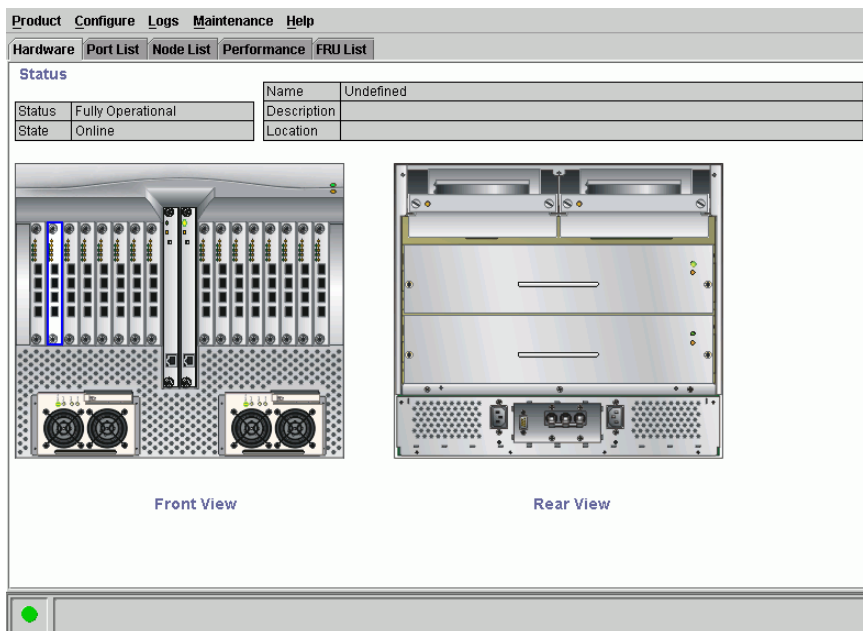


Figure 40 Hardware View page

Set director date and time

The Director Element Manager log entries are stamped with the date and time received from the director. Use these steps to set the effective date and time for the director:

NOTE: The director and HAFM synchronize at least once daily.

1. At the Hardware View, select **Configure > Date/Time**.
The Configure Date and Time dialog box appears ([Figure 41](#)).
2. Set director date and time manually, or set it to periodically synchronize with the HAFM. For specific instructions, see the following sections:
 - [Set date and time manually](#), page 64

- [Synchronize date and time](#), page 64

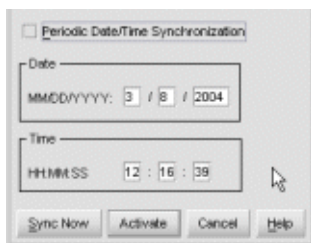


Figure 41 Configure Date and Time dialog box

Set date and time manually

Use these steps to set the director date and time manually:

1. At the Configure Date and Time dialog box, select the **Periodic Date/Time Synchronization** box to deselect the option (no check in the box).
The grayed-out Date and Time fields activate.
2. Click the Date boxes that require change, and enter numbers in the following ranges:
Month (MM): 1 through 12
Day (DD): 1 through 31
Year (YYYY): greater than 1980
3. Click the Time boxes that require change, and enter numbers in the following ranges:
Hour (HH): 0 through 23
Minute (MM): 0 through 59
Second (SS): 0 through 59
4. Click **Activate** to set the director date and time.

Synchronize date and time

Use these steps to set the director to periodically synchronize date and time with HAFM:

1. At the Configure Date and Time dialog box, select the **Periodic Date/Time Synchronization** box.
The Date and Time boxes are grayed-out and not selectable.
2. Click **Activate** to enable synchronization.
The director date and time synchronize with the HAFM date and time at the next update period (at least once daily).
3. Click **Sync Now** to synchronize the director and HAFM immediately.
The Date and Time Synced dialog box appears.

 


Figure 42 Date and Time Synced dialog box

4. Click **OK**.
5. Click **Activate** to enable synchronization.

Frequently used HAFM settings

This section summarizes the most common HAFM tasks including:

 **NOTE:** For a complete reference on HAFM functionality, refer to the *HAFM user guide*.

- [Setting the director online](#), page 65
- [Setting the director offline](#), page 66
- [Configuring director identification](#), page 66
- [Configuring director management style](#), page 67
- [Configuring switch parameters](#), page 67
- [Configuring fabric parameters](#), page 70
- [Configuring preferred path](#), page 73
- [Configuring switch binding](#), page 73
- [Configuring ports](#), page 73
- [Configuring port addresses \(FICON\)](#), page 76
- [Configuring SNMP trap message recipients](#), page 76
- [Configuring and enabling e-mail notification](#), page 77
- [Configuring and enabling call-home features](#), page 79
- [Configuring and enabling Ethernet events](#), page 79
- [Configuring threshold alerts](#), page 79
- [Configure SANtegrity Authentication dialog box](#), page 86
- [Configuring Open Systems Management Server](#), page 86
- [Configuring FICON Management Server](#), page 86
- [Configuring feature key](#), page 86
- [Configuring Open Trunking](#), page 86
- [Enabling Embedded Web Server](#), page 87
- [Enabling Telnet](#), page 87

Setting the director online

When the director is set online, an attached device can log into the director if the port is not blocked. Attached devices can communicate with each other if they are configured in the same zone. Use these steps to set the director online:

1. Open HAFM.
The View All - HAFM 8.6 page appears.
2. Double-click the appropriate director icon.
The Hardware View page for the selected director appears.
3. Select **Maintenance > Set Online State**.

If the director is offline, the Set Online State dialog box appears, indicating the status is Offline.

4. Click **Set Online**.

A Warning dialog box appears, indicating status is online.

5. Click **OK**.

The Status table appears Online.

Setting the director offline

When the director is set offline, all ports are set offline. The director transmits the offline sequence (OLS) to attached devices, and the devices cannot log in to the director. Use these steps to set the director offline:

1. Notify the customer that the director is going offline.

1. Open HAFM.

The View All - HAFM 8.6 page appears.

2. Select the appropriate director icon.

The Hardware View page for the selected director appears.

3. Select **Maintenance > Set Online State**.

If the director is online, the Set Online State dialog box appears, indicating the status is Online.

4. Click **Set Offline**.

A Warning dialog box appears, indicating the director will be set offline.

5. Click **OK**.

Configuring director identification

Perform this procedure to configure the director name, description, location, and contact person for HAFM. The information appears in multiple dialog boxes throughout the application. In addition, the Name, Location, and Contact variables configured in the Configure Identification dialog box correspond respectively to the SNMP variables sysName, sysLocation, and sysContact. These variables are used by SNMP management workstations when obtaining data from managed directors.

Follow these steps to configure the director identification:

1. At the Hardware View page, select **Configure > Identification**.

The Configure Identification dialog box appears (Figure 43).

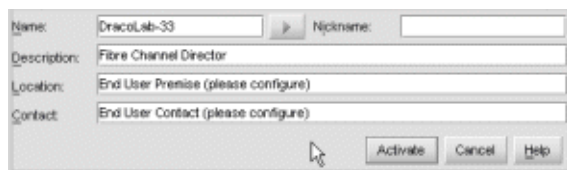



Figure 43 Configure Identification dialog box

2. Enter a director name of 24 or fewer alphanumeric characters in the Name box.


Each director should be configured with a unique name. If the director is installed on a public LAN, the name should reflect the director's Ethernet network DNS host name. For example, if the DNS host name is SAN64.hp.com, the name entered in this dialog box is SAN64.

3. Enter a director description of 255 or fewer alphanumeric characters in the Description box.
4. Enter the director's physical location (255 or fewer alphanumeric characters) in the Location box.
5. Enter the name of a contact person (255 or fewer alphanumeric characters) in the Contact box.
6. Click **Copy** if you want to use the name in the Name box as a nickname for the director WWN. The nickname appears instead of the WWN in Element Manager views.
7. Click **Activate** to save the information and close the dialog box.

Configuring director management style

 **NOTE:** To change this value, you must first set the director offline. Be sure to set the director back online after you change this value.

Perform this procedure to set the director to open systems or FICON management style. This setting only affects the management style used to manage the director; it does not affect port operation. OSI devices can communicate with each other if the director is set to FICON management style, and FICON devices can communicate with each other if the director is set to open systems management style.

 **NOTE:** If the FICON management server feature is enabled, the default management style is FICON. Open systems management style cannot be enabled.

To configure the director management style:

1. Ensure the director is set offline. For instructions, see "Setting the director offline" on page 66.
2. Select **Product > Management Style**.
The Configure Management menu appears.
3. Select the management style as follows:
 - Use **Open Systems** for all other (non-FICON) Fibre Channel environments.
 - If the FICON Management Server feature is enabled, the default style is **FICON**. The management style cannot be changed to Open Systems with the FICON Management Server feature enabled.
4. Set the director online. For instructions, see "Setting the director online" on page 65.

Configuring switch parameters

Use the procedures in this section to set parameters on the director for fabric operation through the Configure Switch Parameters dialog box. These parameters are stored in NV-RAM on the director.

1. Set the director is offline. See "Setting the director offline" on page 66.

△ **CAUTION:** Setting the director offline terminates all Fibre Channel connections.

2. Select **Configure > Operating Parameters > Switch Parameters.**

The Configure Switch Parameters dialog box appears (Figure 44).

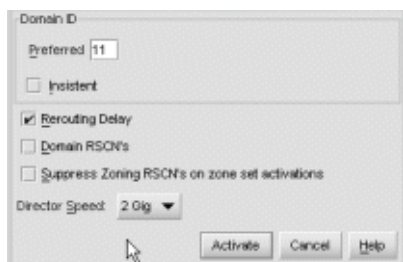


Figure 44 Configure Switch Parameters dialog box

Ordinarily, you do not need to change values in this dialog box from their defaults. The only exception is the Preferred Domain ID. Change this value if the director will participate in a multi-switch fabric.

3. Change settings as required in this dialog box. Each switch parameter is described in detail in [Switch parameters](#), page 68.

4. Click **Activate**.

5. Set the director online. See "Setting the director online" on page 65.

Switch parameters


Configure the following parameters as required by your fabric.

Domain ID

The domain identification is a value between 1 and 31 that provides a unique identification for the director in a fabric. A fabric director cannot contain the same domain ID as another director or their E_Ports will segment when they try to join.

In the Configure Switch Parameters dialog box, a box is provided to enter a preferred domain ID and a check box is provided to enable this ID as an insistent domain ID.

Preferred

 **NOTE:** To change this value, you must first set the director offline. Be sure to set the director back online after you change this value.

Use this box to set a unique domain ID for the director. The default value is 1. Set a value between 1 and 31. When a director comes online with a preferred ID, it requests an ID from the fabric's principal director (indicating its preferred value as part of the request). If the requested domain ID is not allocated to the fabric, the domain ID is assigned to the requesting director. If the requested

domain ID is already allocated, an unused domain ID is assigned. Note that you must set the director offline before you can change to the preferred domain ID.

The preferred domain ID must be unique for each director and switch in a fabric. If two switches or directors have the same preferred domain ID, the E_Ports segment, causing the fabric to segment.


For more information on domain ID, refer to the section on domain ID assignment for multi-switch fabrics in the planning guide.

Insistent

This option is not supported unless the SANtegrity Binding feature is installed. Click the check box to enable or disable this feature. The default state is disabled (no check).

When you select Insistent, the domain ID configured in the Preferred Domain ID box becomes the active domain identification when the fabric initializes.

- This option is required if Enterprise Fabric Mode (optional SANtegrity Binding feature) is enabled.
- If you enable Insistent Domain while the switch or director is online, the Preferred Domain ID will change to the current active domain ID if the IDs are different.

 **CAUTION:** If a director with a duplicate domain ID exists in the fabric, both directors' E_Ports will segment when they try to join.

Rerouting delay

The Rerouting Delay option is only applicable if the configured director is in a multi-switch fabric.

Enabling rerouting delay ensures that frames are delivered in order through the fabric to their destination. If there is a change to the fabric topology that creates a new path (for example, a new director is added to the fabric), frames may be routed over this new path if its hop count is less than a previous path with a minimum hop count. This may result in frames being delivered to a destination out of order since frames sent over the new, shorter path may arrive ahead of older frames still in route over the older path.

If rerouting delay is enabled, traffic ceases in the fabric for the time specified in the E_D_TOV box of the Configure Fabric Parameters dialog box. This delay allows frames sent on the old path to exit to their destination before new frames begin traversing the new path.

 **NOTE:** This option is required if Enterprise Fabric Mode (optional SANtegrity Binding feature) is enabled. The default state is enabled.

Domain RSCNs

Domain register for state change notifications (domain RSCNs) are sent between end devices in a fabric to provide additional connection information to host bus adapters (HBA) and storage devices. As an example, this information might indicate that a logical path has been broken because of a physical event, such as a fiber optic cable being disconnected from a port. Consult with your HBA

and storage device vendor to determine if enabling Domain RSCNs will cause problems with your HBA or storage products.

 **NOTE:** This option is required if Enterprise Fabric Mode (optional SANtegrity Binding feature) is enabled. The default state is enabled.


Suppress RSCNs on zone set activations

Fabric format domain register for state change notifications (RSCNs) are sent to ports on the switch following any change to the fabric's active zone set. These changes include activating and deactivating the zone set, or enabling and disabling the default zone. When the Suppress RSCNs on Zone Set Activations box is selected, fabric format RSCNs are not sent for zone changes to the attached devices on the switch. Click the box to remove or add a check mark.

In most cases this it is desirable to enable this option so that attached devices can receive notification of zoning changes in the fabric. However, some HBAs may log out, then log back into the fabric when they receive an RSCN, thereby disrupting Fibre Channel traffic. Consult with your HBA and storage device vendor to determine if disabling this option (and thereby enabling RSCN transmission) will cause problems with your HBA or storage products. This option is disabled by default.

Director speed


At the Director Speed box, select 1 Gb/sec or 2 Gb/sec to select the speed of Fibre Channel operation.

 **NOTE:** Changing the switch speed to 2 Gb/sec with any 1 Gb/sec FPM cards installed causes the following warning/confirmation message to display: "All FPM ports will be held inactive while the switch is configured to 2 Gb/sec speed. Do you want to continue?"

Configuring fabric parameters

Use procedures in this section to set parameters on the director for fabric operation through the Configure Fabric Parameters dialog box. These parameters are stored in NV-RAM on the director.

1. Verify that the director is set offline. For instructions, see "Setting the director offline" on page 66.

 **CAUTION:** Setting the director offline terminates all Fibre Channel connections.

2. Select **Configure > Operating Parameters > Fabric Parameters**.

The Configure Fabric Parameters dialog box appears (Figure 45).



Figure 45 Configure Fabric Parameters dialog box

3. Use information under “Fabric parameters” to change settings as required for parameters in this dialog box.
4. After you change settings, click **Activate**.
5. Back up the configuration data when you are finished configuring the switch.
6. Set the director online. For instructions, see “Setting the director online” on page 65.

Fabric parameters


Configure the following parameters as required by your fabric.

BB_Credit

Configure the director to support buffer-to-buffer credit (BB_Credit) from 1 through 60. This is the value used for all ports, except those configured for extended distance buffering (10-100 km). The default value is 16. For a description of the buffer-to-buffer credit, refer to the industry specification, *Fibre Channel physical and signaling interface*.


R_A_TOV

Configure resource allocation time-out value (R_A_TOV) in tenth-of-a-second increments. This variable works with the error detect time-out value (E_D_TOV) variable to control the director’s behavior when an error condition occurs. Resources are allocated to a circuit when errors are detected and are not released for reuse until the time set by the R_A_TOV value expires. The default value is 100 tenths (10 seconds). Set a value between 10 tenths and 1200 tenths (1 through 120 seconds).

 **NOTE:** Set the same value for R_A_TOV on all directors and edge switches in a multi-switch fabric. If the value is not the same on all units, the fabric segments. Also, the value for R_A_TOV must be greater than the value configured for E_D_TOV.

E_D_TOV

Adjust the E_D_TOV in tenth-of-a-second increments. An error condition occurs when an expected response is not received within the time limit set by this value. The default value is 20 tenths (2 seconds). Set a value between 2 tenths through 600 tenths (.2 through 60 seconds).

 **NOTE:** Set the same value for E_D_TOV on all switches and directors in a multi-switch fabric. If the value is not the same, the fabric segments.

Switch priority


Setting this value determines the principal director for the multi-switch fabric. Select Principal (highest priority), Default, or Never Principal (lowest priority) from the Switch Priority list.

Setting these priority values determines the principal director selected for the multi-switch fabric. For example, if you have three directors in the fabric and set one as Principal, one as Default, and one as Never Principal, the unit set to Principal becomes the principal director in the fabric.

If all directors are set to Principal or Default, the director with the highest priority and the lowest WWN becomes the principal director. The following are some examples of principal director selection when directors have these settings:

- If you have three directors and set all to Default, the director with the lowest WWN becomes the principal director.
- If you have three directors and set two to Principal and one to Default, the director with the Principal setting that has the lowest WWN becomes the principal director.
- If you have three directors and set two to Default and one to Never Principal, the director with the Default setting and the lowest WWN becomes the principal director.

At least one director in a multi-switch fabric needs to be set as Principal or Default. If all of the directors are set to Never Principal, all of the interswitch links (ISLs) will segment. If all but one director is set to Never Principal and the director that was principal goes offline, then all of the other ISLs will segment.

 **NOTE:** HP recommends you leave the switch priority setting as Default. If you are considering setting this value to something other than default, refer to the section on principal switch selection for multi-switch fabrics in the *HP StorageWorks SAN high availability planning guide* for details.

For example, in the audit log, you may notice that the Principal setting maps to a number code of 1, Default maps to a number code of 254, and Never Principal maps to a number code of 255. The number codes of 2-253 are not currently in use.

Interop mode

Select one of the following options:

- **Homogeneous Fabric**—Select this mode if the fabric contains only HP directors and edge switches that are operating in Homogeneous Fabric mode.
- **Open Fabric 1.0**—Default. Select this mode if the fabric contains HP directors and edge switches, as well as other open-fabric compliant switches. Select this mode for managing heterogeneous fabrics.

 **NOTE:** Selecting Open Fabric 1.0 disables the default zone. You must activate the default zone or enable the active zone set.

Configuring preferred path

The preferred path feature allows a user to specify and configure one or more ISL data paths between multiple directors or switches in a fabric. Each participating director or switch must be configured as part of a desired path. For complete procedures on configuring this optional feature, refer to the *HP StorageWorks Director Element Manager user guide*.

Configuring switch binding

This feature is managed through the Switch Binding submenu options available on the Element Manager Configure menu. Using Switch Binding, you can specify devices and switches that can attach to director and switch ports. This provides security in environments that include a large number of devices by ensuring that only the intended set of devices attach to a switch or director. For complete procedures on configuring this optional feature, refer to *HP StorageWorks Director Element Manager user guide*.

Configuring ports

Perform this procedure to define Fibre Channel port names, configure ports as blocked or unblocked, enable extended distance operation and Link Incident (LIN) alerts, and define port types.

1. At the Hardware View page, select **Configure > Ports**.

The Configure Ports dialog box appears ([Figure 46](#)).

- a. Select a blank Name box and enter a descriptive port name of 24 or fewer alphanumeric characters. Use a unique name that reflects the device connected to the port. This name will be associated with the port and will not change regardless of the device connected.
- b. Select the **Blocked** box to block a port, or deselect the blocked box to unblock the port.

A check in the box indicates that the port is blocked. Blocking the port prevents the attached device from communicating with the director. A blocked port continuously transmits the offline sequence.

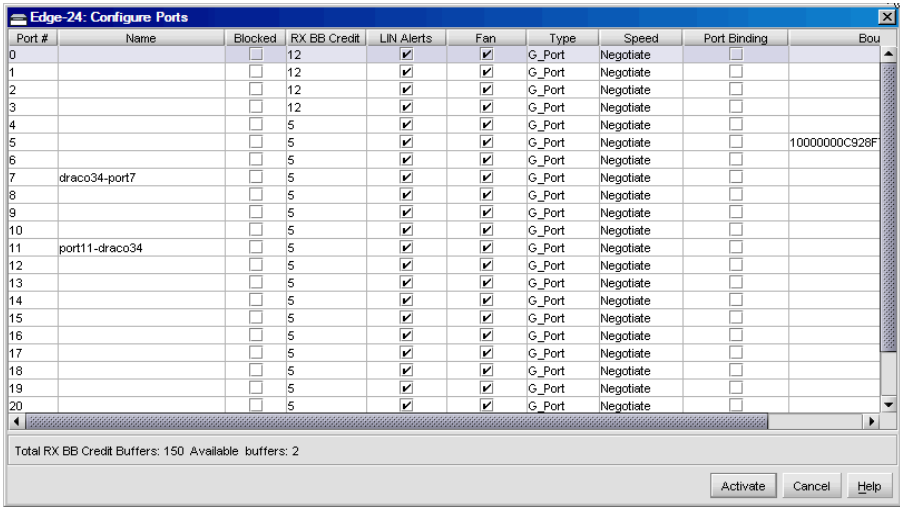


Figure 46 Configure Ports dialog box

- c. Select the 10-100 km box to enable extended distance buffering for a port.
A check in the box indicates the extended distance operation up to 100 kilometers (through repeaters) is enabled.

NOTE: If the director supports BB_Credits by port, the 10-100 Km column is replaced by an RX BB Credit column.

- d. If the director supports BB_Credits by port, right-click the RX BB Credit column.
The RX BB Credits dialog box appears.

NOTE: The port must be offline to change the BB_Credit field.


- For switches without buffer pools, this dialog box allows you to:
 - Set all...* to set all ports to a single value (the Set All RX BB Credits dialog box appears for you to enter the RX BB value)
 - Set all to maximum* to set all ports to a maximum BB_Credit value. Maximum allowable port BB_Credit values vary by director
- For switches with buffer pools, this dialog box allows you to:
 - Set all...* to set all ports to a single value (the Set All RX BB Credits dialog box appears for you to enter the RX BB value)
 - Distribute* to evenly distribute the pool buffers among all ports.

Click OK to change the values in the Configure Port dialog box.

Click Activate to change the values on the director.

An RX BB Credit Confirmation box displays.

In addition to the maximum BB-Credit limit per port, the total BB_Credits allocated to all ports cannot exceed the buffer pool size.

 **NOTE:** Only 24-Port switches have a switch-wide buffer pool. The Configure Ports dialog box shows the total and available buffers at the bottom of the dialog box. When you change information in the RX BB Credit column, the buffer information automatically updates. Ports for the 24-Port switches can be individually configured between 2-12, with a total number of port credits of 150.

- e. Select the LIN Alerts box to enable or disable LIN alerts for a port.

A check in the box indicates alerts are enabled. When the feature is enabled and an incident occurs on the link, an alert indicator (yellow triangle) appears at the Hardware View, Port List View, and Port Card View pages, and a message is sent to configured e-mail recipients. LIN alerts are enabled by default.

- f. Select a Type box and select generic port (G_Port), fabric port (F_Port), or expansion port (E_Port) from the list. If F_Port or E_Port is selected, the port will only operate as the port type selected. If G_Port is selected, the port type is automatically detected and will operate as an E_Port or F_Port.

- g. Click the Speed box for a port.

A Speed list appears.

Select 1Gb/sec, 2Gb/sec, or Negotiate as the desired setting depending on the speed capability of the device to be plugged into the port. A right-click in the Speed column allows selecting from a pop-up menu to set all ports to 1Gb/sec, 2Gb/sec, or Negotiate.

- h. Click the Port Binding box to enable WWN binding for the port, which allows only a specific device to attach to the port.

This device is specified by the WWN or nickname entered into the Bound WWN column. With the box cleared, any device can attach to the port even if a WWN or nickname is specified in the Bound WWN column.

- i. In the Bound WWN box, enter a world wide name (WWN) in the correct format (xx.xx.xx.xx.xx.xx.xx) or a nickname configured through the Element Manager.

If Port Binding is enabled, the device with this WWN or nickname has exclusive attachment to the port. If Port Binding is enabled but an invalid WWN or nickname is entered in this box, no device can connect to the port. If a valid WWN or nickname is entered but the Port Binding is not checked, the WWN or nickname is stored and all devices can connect to the port.

- 2. Use the vertical scroll bar as necessary to display additional port information rows (up to 64 ports).
- 3. Click **Activate** to save the configuration information and close the dialog box.

If any port speed was changed, an information message box appears stating, “Port speed changes will temporarily disrupt port data transfers. Would you like to continue?”

- 4. Click **Yes** to complete activation.

Configuring port addresses (FICON)

If the director is set to FICON management style, perform this procedure to access the director matrix and define Fibre Channel port names, configure ports as blocked or unblocked, and define the CUP name. For instructions on configuring port addresses, refer to *HP StorageWorks Director Element Manager user guide* for details.

Configuring SNMP trap message recipients

Use this procedure to configure community names, write authorizations, network addresses, and UDP port number for up to 12 SNMP trap message recipients. A trap recipient is a management workstation that receives notification through SNMP.

- 1. At the Hardware View page, select **Configure > SNMP Agent**.

The Configure SNMP dialog box appears (Figure 47).

Community Name	Write Authorization	Trap Recipient	UDP Port Number
public	<input type="checkbox"/>		
	<input type="checkbox"/>		
	<input type="checkbox"/>		
	<input type="checkbox"/>		
	<input type="checkbox"/>		

Figure 47 Configure SNMP dialog box

- a. For each trap recipient to be configured, enter a community name of 32 or fewer alphanumeric characters in the associated Community Name box. The community name is incorporated in SNMP trap messages to ensure against unauthorized viewing or use.
- b. Click the box in the Write Authorization column to enable or disable write authorization for the trap recipient (default is disabled).
A check in the box indicates write authorization is enabled. When the feature is enabled, a management workstation user can change the HAFM appliance’s sysContact, sysName, and sysLocation SNMP variables.
- c. Enter the IP address or DNS host name of the trap recipient (SNMP management workstation) in the associated Trap Recipient box. Use 64 or fewer alphanumeric characters. HP recommends using the IP address.
- d. Enter a decimal user datagram protocol (UDP) port number in the associated UDP Port Number box. (This number is commonly 162.)

2. To enable transmission of trap messages to configured SNMP management workstations, select **Enable Authorization Traps**.
A check appears in the box when transmission is enabled.
3. Click **Activate** to save the information and close the dialog box.

Configuring and enabling e-mail notification

Use this procedure to configure and enable e-mail addresses and Simple Mail Transfer Protocol (SMTP) server addresses to receive e-mail notification of director (and other managed product) events. The addresses must be configured via HAFM, then enabled.

Use these steps to configure and enable e-mail and SMTP server addresses:

1. At the HAFM main page, select **Monitor > Event Notification > Email**.

The Email Event Notification Setup dialog box appears (Figure 48).

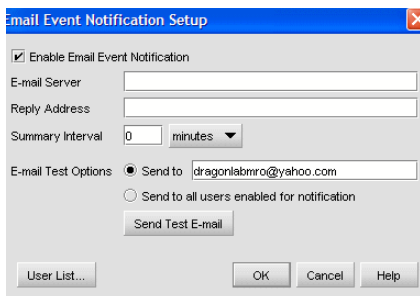



Figure 48 Email Event Notification Setup dialog box

2. To enable e-mail transmission of configured addresses, select **Enable Email Event Notification**.
A check appears in the box when transmission is enabled.

 **NOTE:** The enable function must be activated for each director or switch through the Element Manager. E-mail notification can be active for some directors or switches and inactive for others.

3. Enter the IP address or DNS host name of the SMTP server in the E-mail Server box. Use 64 or fewer alphanumeric characters.
4. Enter the e-mail address to which e-mail replies should be sent in the Reply box.
5. At the Summary Interval box, enter the length of time the application should wait between notifications. Select seconds, minutes, or hours from the associated list.
6. To specify users that are to receive e-mail notification, select **User List**.

The HAFM 8.6 Server Users dialog box appears (Figure 49).

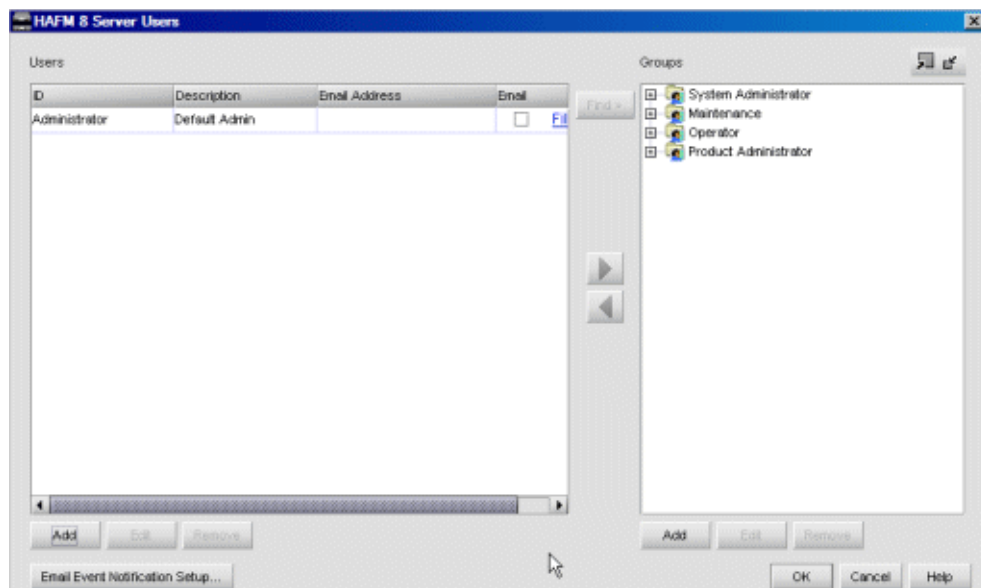


Figure 49 HAFM 8.6 Server Users dialog box

7. To enable e-mail notification for a user, select the box in the Email column.
An unchecked box indicates e-mail notification is not enabled.
8. To configure event types for which e-mail notification is sent, select the Filter link adjacent to the check box.
The Define Filter dialog box appears (Figure 50).

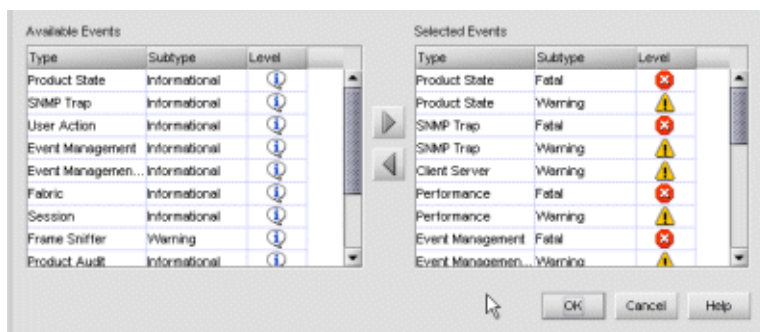


Figure 50 Define Filter dialog box

9. Select the filters that you want for this user.
10. Click **OK** to close the Define Filter dialog box.
11. Click **OK** to close the HAFM 8.6 Server Users dialog box.
12. Select an E-mail test option:
 - Send to a user specified in the Send to box
 - Send to all users enabled for notification

13. Click **Send Test E-mail**.


A test message is sent to configured e-mail recipients.

14. Click **OK** to save the information and close the Email Event Notification Setup dialog box.

15. Maximize the Hardware View (Element Manager).

16. At the Hardware View, select **Maintenance > Enable E-Mail Notification**.

A check appears in the box to indicate e-mail notification for the director is enabled, and the menu closes.

 **NOTE:** Use HAFM to enable or disable e-mail event notification for each director.

Configuring and enabling call-home features

There are two call-home features available, and one is installed with the HAFM application. To learn more about configuring call-home features, refer to the *HP StorageWorks HA-Fabric Manager appliance installation guide*.

Configuring and enabling Ethernet events

Perform this procedure to configure and enable Ethernet events. An Ethernet event is recorded (after a user-specified time interval) when the director-to-HAFM appliance communication link drops. To configure and enable Ethernet events:

1. Select **Monitor > Ethernet Event**.

The Configure Ethernet Event dialog box appears (Figure 51).

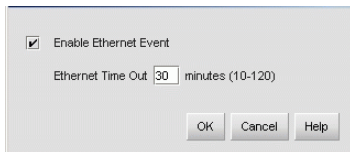


Figure 51 Configure Ethernet Event dialog box

2. Select the **Enable Ethernet Events** box.

A check appears in the box to indicate Ethernet events are enabled.

3. Enter a value between 10 and 120 minutes in the Ethernet Timeout box.

4. Click **OK** to close the dialog box.

Configuring threshold alerts

Threshold alerts notify you when the transmit (Tx) or receive (Rx) throughput reaches specified values for specific director ports or port types (E_Ports or F_Ports). You are notified of a threshold alert as follows:

- A yellow triangle appears on the port in the Port Card View.
- A yellow triangle appears on the port in the Hardware View.
- A yellow triangle appears in the Alert column of the Port List View.

- A yellow triangle appears by the Threshold Alerts box in the Port Properties dialog box.
- Detailed threshold alert data is recorded in the Threshold Alert Log.

Use the Threshold Alerts option on the Configure menu to configure the following:


- Name for the alert.
- Type of threshold for the alert (Rx, Tx, or either).
- Active or inactive state of the alert.
- Threshold criteria:
 - Percent traffic capacity utilized—The percent of the port's throughput capacity achieved by the measured throughput. This setting constitutes the threshold value. For example, a value of 50 means that the port's threshold is reached when throughput is 50% of capacity.
 - Time interval during which throughput is measured and alert notification can occur.
 - The maximum cumulative time that the throughput percentage threshold can be exceeded during the set time interval before an alert is generated.
- Ports for which you are configuring threshold alerts.

You can configure up to 16 alerts, and any number of alerts can be active at one time. Use the following procedures to create a new threshold alert, or to modify, activate, deactivate, or delete an alert.

Creating new alerts

1. At the Hardware View page, select **Configure > Threshold Alerts**.

The Configure Threshold Alerts dialog box appears (Figure 52).

 **NOTE:** If alerts are configured, they display in table format showing the name of the alert, type of alert (Rx, Tx, or Rx or Tx), and alert state (inactive or active).

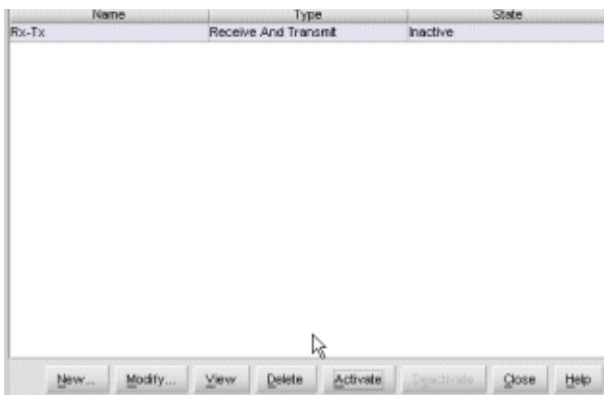


Figure 52 Configure Threshold Alerts dialog box

2. Click **New**.

The New Threshold Alert dialog box appears (Figure 53).



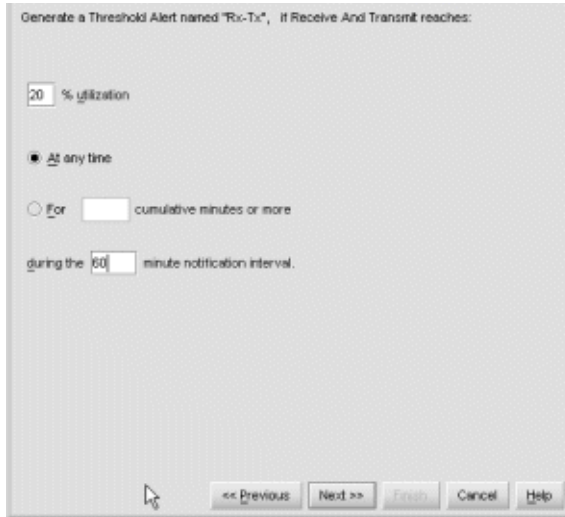
The image shows a software dialog box titled "New Threshold Alerts dialog box—first screen". It has a light gray background. At the top, it says "Enter name and type of threshold alert:". Below this, there are two fields. The first is labeled "Threshold Alert Name:" and contains the text "Rx-Tx". The second is labeled "Threshold Type:" and is a dropdown menu with "Receive And Transmit" selected. At the bottom of the dialog box, there are five buttons: "< Previous", "Next >>", "Finish", "Cancel", and "Help". A mouse cursor is pointing at the "Next >>" button.

Figure 53 New Threshold Alerts dialog box—first screen

3. Enter a name from one to 64 characters in length. All characters in the ISO Latin-1 character set, excluding control characters, are allowed.
4. Select one of the following from the Threshold Type list:
 - **Receive**—An alert will occur if the threshold set for receive throughput is reached.
 - **Transmit**—An alert will occur if the threshold set for transmit throughput is reached.
 - **Receive or Transmit**—An alert will occur if the threshold set for either receive or transmit throughput is reached.
5. Click **Next**.

A new screen appears with additional parameters (Figure 54). The name configured for the alert appears at the top of the screen.

 **NOTE:** Click **Previous** if you need to return to the previous screen.

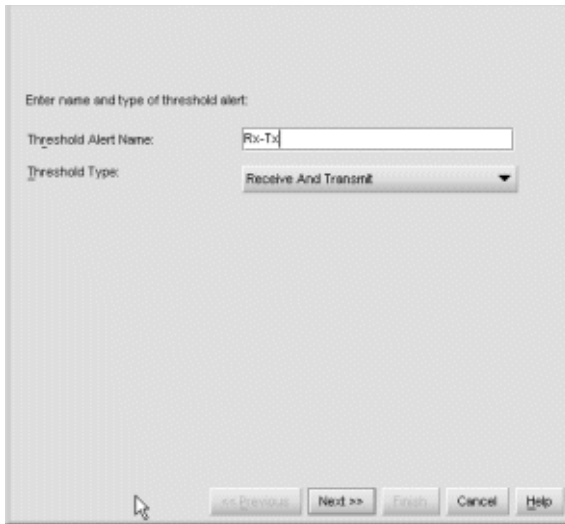

Generate a Threshold Alert named "Rx-Tx", if Receive And Transmit reaches:

% utilization

☒ At any time

☐ For cumulative minutes or more

during the minute notification interval.

Figure 54 New Threshold Alerts dialog box—second screen

6. Enter a percentage from 1 through 100 for % utilization.
When throughput reaches this percentage of port capacity, a threshold alert will occur.
7. Enter the amount of cumulative minutes in which the % utilization should exist during the notification interval before an alert is generated. The valid range is from 1 to the interval value set in [step 8](#).
You can also select **At any time** if you want an alert to occur whenever the set % utilization is reached.
8. Enter the interval in minutes in which throughput is measured and threshold notifications can occur. The valid range is 5 minutes to 70,560 minutes.
9. Click **Next**.

A new screen appears for selecting ports for the alerts (Figure 55).

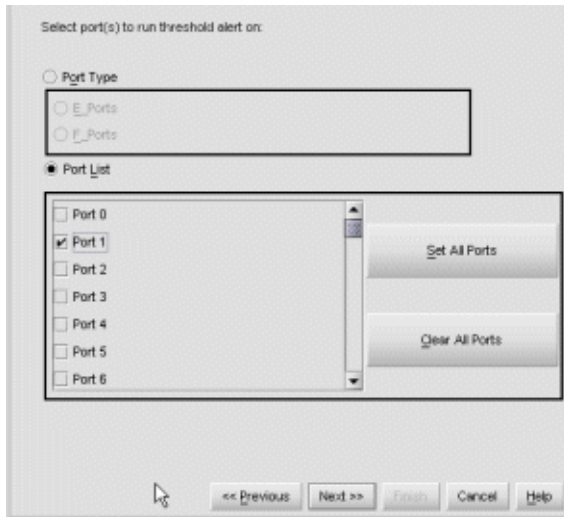


Figure 55 New Threshold Alerts dialog box—third screen

10. Select either **Port Type** or **Port List**.

- If you select **Port Type**, selecting either E_Ports or F_Ports to cause an alert to generate for all ports configured as E_Ports or F_Ports, respectively.
- If you select **Port List**, you can specify one or more ports for which to generate an alert:
 - Select individual ports by clicking the port number box
 - Select **Set All Ports**
 - Select **Clear All Ports**

11. Click **Next**.

A final screen appears to provide a summary of your alert configuration (Figure 56).

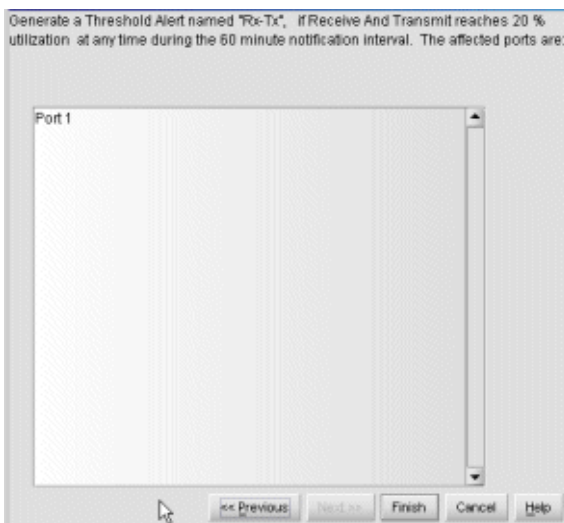


Figure 56 New Threshold Alerts dialog box—summary screen

12. Click **Finish**.

The Configure Threshold Alerts dialog box appears ([Figure 57](#)).

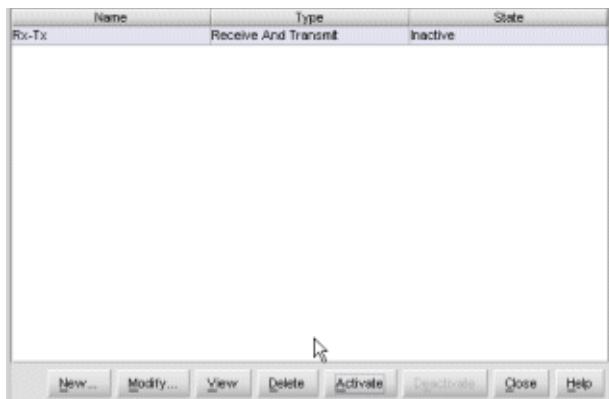


Figure 57 Configure Threshold Alerts dialog box

13. At this point, the alert is not active. To activate the alert, select the alert information that appears in the Configure Threshold Alerts list and then click **Activate**.

The alert is activated.

Modifying alerts

Use the following steps to modify an existing threshold alert configuration.

1. At the Hardware View page, select **Configure > Threshold Alerts**.

The Configure Threshold Alerts dialog box appears.

2. Select the alert that you want to modify from the list. If the alert is active, an error message appears prompting you to deactivate the alert.

3. Click **Deactivate** if necessary, and then select the alert information in the table again.

4. Click **Modify**.

An initial Modify Threshold dialog box appears.

5. Make the appropriate changes to the threshold type.

6. Click **Next**.

A Modify Threshold dialog box appears, where you can change the % utilization, cumulative minutes for the threshold to occur before notification, and the time interval for measuring throughput and for alert notification.

7. Make the appropriate changes, and then continue through the Modify Threshold dialog boxes. Make changes as necessary, until the summary screen displays the alert configuration.

NOTE: At any time you can click **Previous** or **Next** to display the desired Modify Threshold dialog box and change parameters.

8. At the summary screen, click **Finish**.

Activating or deactivating alerts

Use the following steps to activate or deactivate existing threshold alerts. In the active state, notifications are generated for the alert. In the inactive state, notifications do not occur.

1. At the Hardware View page, select **Configure > Threshold Alerts**.
The Configure Threshold Alerts dialog box appears.
The port's current state, inactive or active, is listed under the State column.
2. Select the alert that you want to change from the list.
3. If the alert is active, select **Deactivate** to change to the inactive state.
If the alert is inactive, select **Activate** to change to the active state.


Deleting alerts

Use the following steps to delete existing threshold alerts.

1. At the Hardware View page, select **Configure > Threshold Alerts**.
The Configure Threshold Alerts dialog box appears.
2. Select the alert that you want to delete from the list.
3. Click **Delete**.
A message appears asking you to confirm the deletion.
4. Click **Yes**.
The alert is removed from the dialog box.

Configuring SANtegrity Authentication

Use this optional feature to configure the authentication security settings.

 **NOTE:** You must have Administrator privileges to access the SANtegrity Authentication dialog box.

From the Element Manager window, select **Configure Menu > SANtegrity Authentication**.

The Configure SANtegrity Authentication dialog box appears ([Figure 58](#)) with the following tabs:

- **Users**—Allows you to setup users who access the switch from CLI and web interfaces.
- **Software**—Allows you to setup software applications that communicate with the switch through API, as well as OSMS authentication.
- **Devices**—Allows you to set device-to-device authentication parameters. The Device tab is PFE key enabled. If a proper PFE key is not provided, the Devices tab is not accessible.
- **IP Access Control**—Allows you to setup IP addresses that can manage the switch.

- **Radius Servers**—Allows you to set Radius server parameters that the switch uses to communicate the authentication information to the designated Radius servers.

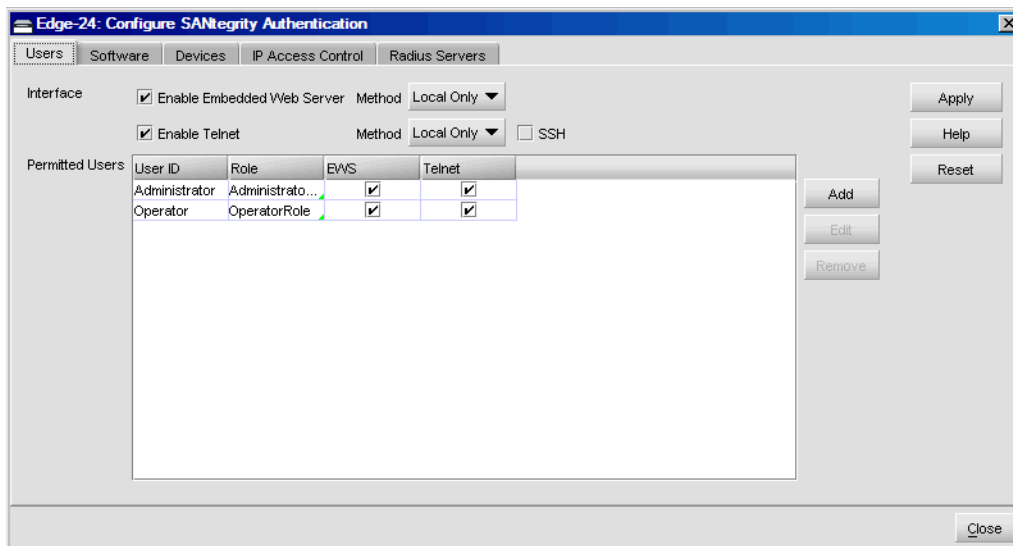


Figure 58 Configure SANtegrity Authentication dialog box

Backing up HAFM configuration data

It is important to back up the HAFM configuration data. This data is used to restore the HAFM appliance operating environment in case of hard drive failure.

Refer to the *HP StorageWorks HA-Fabric Manager Appliance installation guide* for instructions on backing up the HAFM configuration data.

Configuring Open Systems Management Server

For complete procedures on configuring this optional feature, refer to the *HP StorageWorks Director Element Manager user guide*.

Configuring FICON Management Server

For complete procedures on configuring this optional feature, refer to the *HP StorageWorks Director Element Manager user guide*.

Configuring feature key

For complete procedures on configuring this feature, refer to the *HP StorageWorks Director Element Manager user guide*.

Configuring Open Trunking

This option is only available if the Open Trunking feature is installed. For details on Open Trunking and configuring parameters such as congestion thresholds for ports, event notification options, and low BB credit threshold, refer to the *HP StorageWorks Director Element Manager user guide*.

Enabling Embedded Web Server

Use the following steps to enable EWS:

1. At the Hardware View page, select **Configure > Enable Web Server**.
Selecting Enable Web Server automatically places a check in the box.
2. Select **Enable Web Server** again to remove the check and disable the EWS interface.
When disabled, remote users cannot access the interface.

For complete procedures on using EWS, refer to the *HP StorageWorks Embedded Web Server user guide*.

Enabling Telnet


Use the following steps to enable Telnet:

1. At the Hardware View, select **Configure > Enable Telnet**.
Selecting Enable Telnet automatically places a check in the box.
2. Select **Enable Telnet** again to remove the check and disable telnet access.
When disabled, remote users cannot access the director through telnet.

Connecting cables to the Fibre Channel ports

Use these steps to connect Fibre Channel port cables:

1. Route the fiber-optic cables from customer-specified devices to ports at the front of the director (Figure 59).

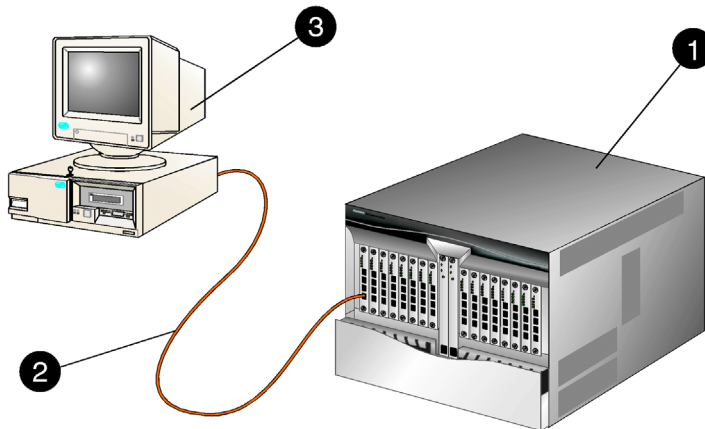

1 Director 2/64

2 Fibre Channel cables

3 Workstation

SHR-2271

Figure 59 Connect the Fibre Channel cables

2. Connect device cables to ports and route the cables through the cable management assembly at the bottom front of the director. Start with the center UPM cards (cards 7 and 8) adjacent to the CTP2 cards and work outward. In addition, start with the bottom port of each UPM card and work upward.
3. Bundle Fibre Channel cables from the director and other equipment (groups of 16 maximum) and secure them as directed by the customer.
4. Set the director online. For instructions, see "Setting the director online" on page 65.

Connecting the director to a fabric

To attach the director to a multi-switch fabric, connect the director to an E_Port of another director or switch. The E_Port to E_Port connection is referred to as an ISL.

Use these steps to fabric-attach the director and create an ISL:

1. Verify that the director is defined via HAFM. See "Enabling HAFM to manage the director" on page 61.
2. Verify that the preferred domain ID for the director is unique and does not conflict with the ID of another director or switch participating in the fabric. To change the domain ID, see "Configuring fabric parameters" on page 70.
3. Verify that the R_A_TOV and E_D_TOV values for the director are identical to the values for all directors and edge switches participating in the fabric.
4. Route a multi-mode or single-mode fiber-optic cable (depending on the ISL distance between directors) between customer-specified E_Ports on both directors.
5. At the HAFM application physical map, right-click the director product icon, and then select **Element Manager** from the menu.
6. If required, click the **Hardware** tab.
The Hardware View appears.
7. Double-click the graphical port connector used for the fabric ISL. The Port Properties dialog box appears (Figure 60).

Port Number	90
Port Name	
Type	F_Port
Operating Speed	1 Gb
Fibre Channel Address	635E13
Port WWN	McDATA-20:5E:08:00:88:A0:B2:6D
Attached Port WWN	Digital Equipment -50:00:1F:E1:00:14:2C:C4
Block Configuration	Unblocked
10-100 km Configuration	Off
LN Alerts Configuration	On
Beaconing	Off
Link Incident	None
Operational State	Online
Reason	
Threshold Alert	

Close Help

Figure 60 Port Properties dialog box

8. Verify that the Link Incident box displays *None*.

If an ISL segmentation or other problem is indicated, consult the *HP StorageWorks Director 2/64 service manual* to isolate the problem. If no problems are indicated, installation is complete.

Unpacking, inspecting, and installing the Ethernet hub (optional)

The HAFM appliance and one or more directors connect through an Ethernet hub installed on a 10/100 Mbps LAN segment. One hub port is required to connect the HAFM appliance, and one hub port is required to connect each director. A combination of up to 48 HP directors or switches can be configured and managed by a single HAFM appliance, therefore multiple hubs may be required to provide sufficient port connections. These hubs must be connected in accordance with the hub manufacturer's specifications. HP recommends using a star or hub-and-spoke topology when connecting multiple hubs. The HAFM appliance must be connected to the center hub, and there should never be more than two hubs between the HAFM appliance and any director. Refer to the hub manufacturer's documentation for more detailed information.

For instructions to unpack and inspect one or more Ethernet hubs, and to install the hubs in a desktop or rack-mount configuration, refer to the appropriate Ethernet hub documentation.

Using HAFM from a remote location


You can use a standard Web browser to download and install the client HAFM and Director Element Manager on PCs or workstations that are LAN-attached to the HAFM appliance. Operators at these platforms can manage and monitor directors or switches controlled by the appliance. A maximum of 25 concurrent users can log in to the HAFM appliance.

Each client must have access to the LAN segment on which the HAFM appliance is installed. Director administrative functions are accessed through the LAN and appliance. Use this section to install the HAFM client on a remote workstation.

Remote workstation minimum requirements

The Client HAFM and Element Manager applications operate on platforms that meet the following minimum system requirements:

- Desktop or notebook PC with color monitor, keyboard, and mouse, using an Intel Pentium III processor with a 700 MHz or greater clock speed, and using the Microsoft Windows 2000 (with service pack 5 or higher), Windows NT 4.0 (with service pack 6a), or Windows 2003 operating system.

 **NOTE:** In order for HAFM to function properly, compatible versions must be installed on both the client and server machines.

- UNIX® Workstation with color monitor, keyboard, and mouse using:
 - Linux-based system using an Intel Pentium III processor with a 1 gigahertz (GHz) or greater clock speed, using the Red Hat® 7.3 or higher operating system.

- HP PA-RISC processor with a 400 MHz or greater clock speed, using the HP-UX 11 or higher operating system.
- Sun Microsystems® UltraPARC-II processor with a 300 MHz or greater clock speed, using the Solaris Version 7.0 or higher operating system.
- IBM POWER3-II® microprocessor with a 333 MHz or greater clock speed, using the AIX Version 4.3.3 or higher operating system.
- At least 150 MB (Windows-based) or 350 MB (UNIX-based) available on the internal hard drive.
- 512 MB or greater RAM.
- Video card supporting 256 colors at 800 x 600 pixel resolution.
- Ethernet network adapter.
- Java-enabled Internet browser, such as Microsoft Internet Explorer (Version 4.0 or later) or Netscape Navigator (Version 4.6 or later).

Installing HAFM client on a remote workstation

Use these steps to install HAFM on a remote client:

1. Verify the workstation and the Ethernet LAN segment (with the director attached) are connected through the Internet.
2. At the workstation, launch the browser application.
3. At the browser, enter the HAFM appliance IP address.
4. The HAFM splash screen appears ([Figure 61](#)), with the following options.
 - a. **Install HAFM remote client application**—Select this option to install the application for your workstation platform. Advance to [step 5](#).
 - b. **Download SNMP MIB files**—The Management Information Base (MIB) files are provided in standard ASN.1 syntax and may be installed into the MIB database of any SNMPv2 compliant Network Management Station.

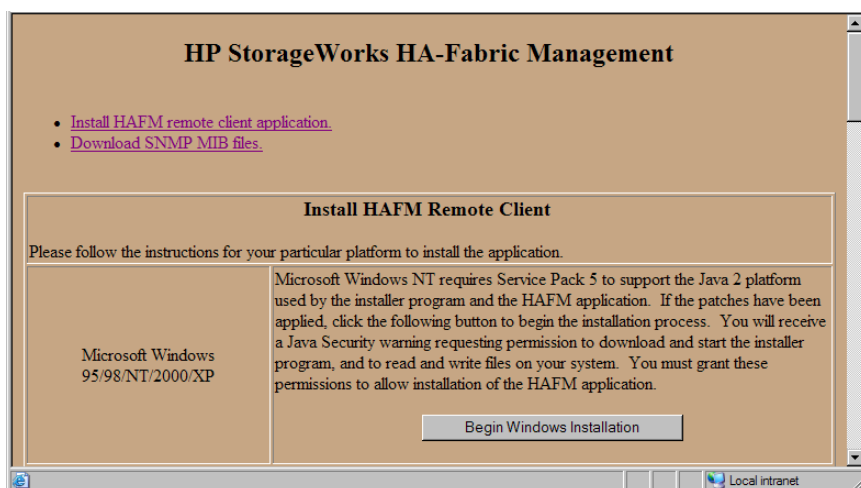



Figure 61 HAFM remote client install

5. If you selected Install HAFM remote client application, follow the instructions provided that pertains to your platform.
6. After you have downloaded the installer executable, the InstallAnywhere Wizard appears. Follow the instructions provided to continue the installation.

Launching HAFM from the remote client

Use these steps to launch HAFM from a remote client:

1. Double-click the HAFM icon to launch HAFM.
The HAFM 8.6 Log In dialog box appears (Figure 62).

 **NOTE:** The default Windows 2000 user name is Administrator and the default password is password. The user name and password are case-sensitive.

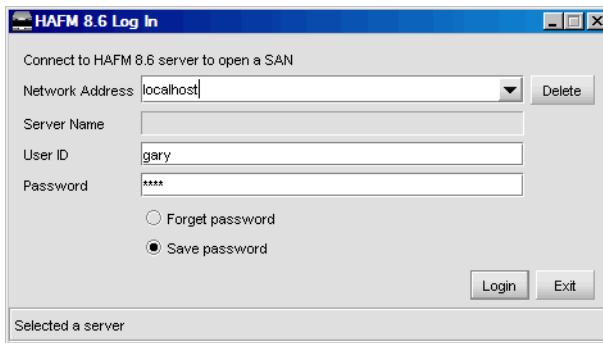


Figure 62 HAFM 8.6 Log In dialog box

2. Enter the HAFM appliance IP address in the Network Address box.
 - The default address that appears in the Network Address box is the address of the last server accessed.
 - Click the Network Address arrow to see a list of network addresses of all HAFM appliances that were accessed from your computer.
 - If you are logging in to the local HAFM appliance, the HAFM appliance name is *localhost*.
 - If you want to connect to an HAFM appliance that is not listed, enter the IP address in the Network Address box.
3. Enter your user name and password in the User Name and Password boxes.
User names and passwords are case-sensitive.
4. If you want your computer to save the login information, select the **Save password** option.
5. Click **Login**.

The View All - HAFM 8.6 window appears (Figure 63).

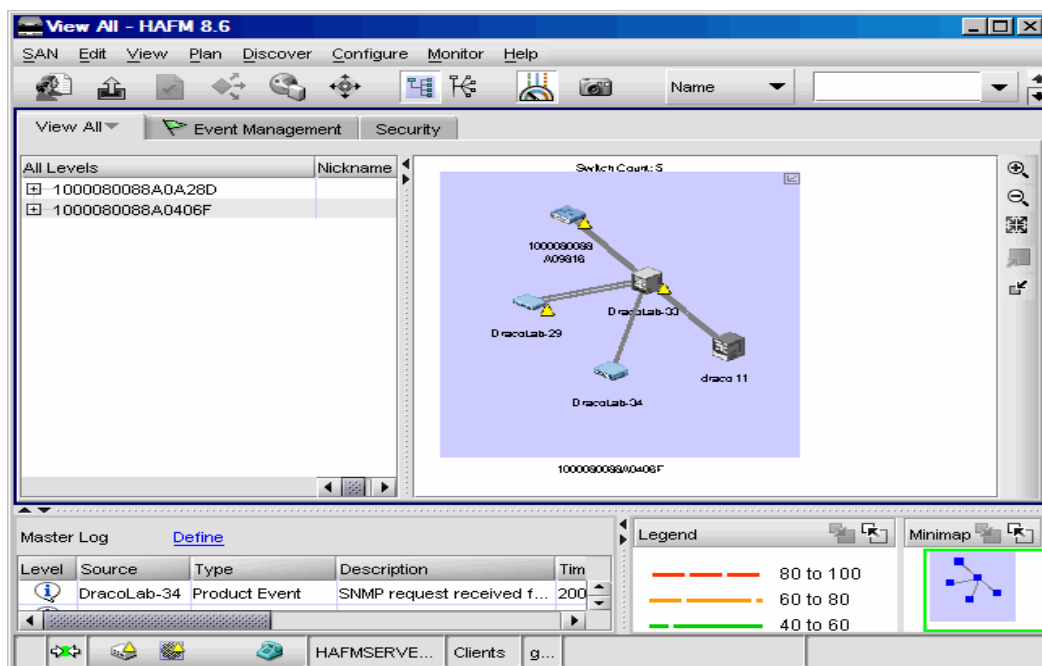


Figure 63 View All - HAFM 8.6 window

3 Managing firmware versions

The director 2/64 internal operating code is downloaded from the HAFM appliance and stored on a CTP2 card. Up to eight (8) versions can be stored on the HAFM appliance hard drive and made available for download to a director. This chapter contains information on the following firmware management tasks:

- [Determining a director firmware version](#), page 93
- [Adding a firmware version](#), page 94
- [Modifying a firmware version description](#), page 95
- [Deleting a firmware version](#), page 96
- [Downloading a firmware version to a director](#), page 96
- [Backing up the director's configuration](#), page 98

Determining a director firmware version

Use these steps to determine the director firmware version:

1. Open the HAFM application.
The View All - HAFM 8.6 main window appears.
2. Double-click the icon representing the director to be inspected for firmware version.
The Hardware View page for the selected director appears.
3. Select **Maintenance > Firmware Library**.
The Director Firmware Library dialog box appears ([Figure 64](#)).

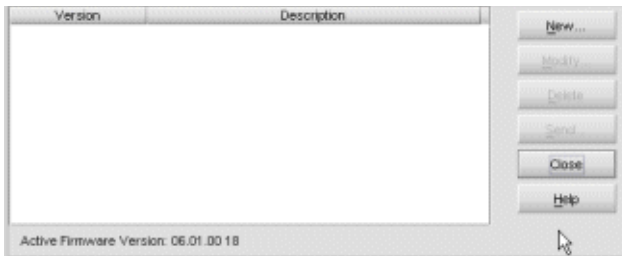



Figure 64 Director Firmware Library dialog box

4. The firmware version appears at the lower left corner of the dialog box in WW.XX.YY.ZZ format, where:
 - WW is the version level
 - XX is the release level
 - YY is the patch level
 - ZZ is the build level
5. Click **Close**.

Adding a firmware version

The firmware version shipped with the director is provided on the director documentation CD. Subsequent firmware versions to upgrade the director are provided to customers through the HP website.

 **NOTE:** When adding firmware, follow procedural information in the release notes that accompany the firmware version. The release notes provide supplemental information to this procedure.

Use these steps to add a director firmware version to the library stored on the HAFM appliance hard drive:

1. Obtain the new firmware version from the HP website:
<http://www.hp.com/country/us/eng/support.html>
 - a. Click **Firmware Downloads** in the left panel.
 - b. Click the **Director Firmware Version XX.YY.ZZ** entry, where XX.YY.ZZ is the version.
The Windows Save As dialog box appears.
Verify or correct the directory path specified in the Save in box and the file name specified in the File name box.
 - c. Click **Save**.
The new firmware version is downloaded and saved to the HAFM appliance or PC hard drive.
 - d. If the new firmware version was downloaded to a PC (not the HAFM appliance), transfer the firmware version file to the HAFM appliance by backup disk, CD-ROM, or other electronic means.
2. Open the HAFM application.
The View All - HAFM 8.6 main window appears.
3. Double-click the icon representing the director to which the firmware version will be added.
The Hardware View page for the selected director appears.
4. Select **Maintenance > Firmware Library**.
The Director Firmware Library dialog box appears (Figure 64).
5. Click **New**.

The New Firmware Version dialog box appears (Figure 65).

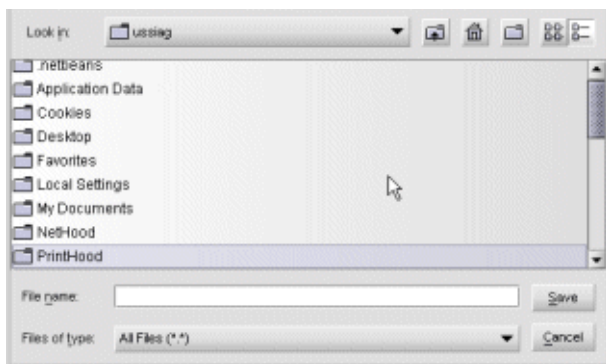


Figure 65 New Firmware Version dialog box

6. Select the desired firmware version file (downloaded in [step 1](#)) from the HAFM appliance backup drive, CD-ROM drive, or hard drive.
Verify that the correct directory path and filename display in the File name box and click **Save**.
The New Firmware Description dialog box appears ([Figure 66](#)).



Figure 66 New Firmware Description dialog box

7. Enter a description (up to 24 characters in length) for the new firmware version and click **OK**.
HP recommends the description include the installation date and text that uniquely identifies the firmware version.
A Transfer Complete message box appears indicating the new firmware version is stored on the HAFM appliance hard drive.
8. Click **Close** to close the message box.
The new firmware version and associated description appear in the Director Firmware Library dialog box.
9. Click **Close**.
10. To send the firmware version to a director, see "[Downloading a firmware version to a director](#)" on page 96.

Modifying a firmware version description

Use these steps to modify the description of a director firmware version in the library stored on the HAFM appliance hard drive:

1. Open the HAFM application.
The View All - HAFM 8.6 main window appears.
2. Double-click the icon representing the director for which the firmware version description will be modified.
The Hardware View page for the selected director appears.

3. Select **Maintenance > Firmware Library**.

The Director Firmware Library dialog box appears (Figure 64).

4. Select the firmware version to be modified and click **Modify**.

The Modify Firmware Description dialog box appears.

5. Enter a modified description (up to 24 characters in length) for the firmware version and click **OK**.

HP recommends that you include the installation date and text that uniquely identifies the firmware version in the description.

The new description for the firmware appears in the Director Firmware Library dialog box.

6. Click **Close**.

Deleting a firmware version

Use these steps to delete a firmware version from the library stored on the HAFM appliance hard drive:

1. Open the HAFM application.

The View All - HAFM 8.6 main window appears.

2. Double-click the icon representing the director from which the firmware version will be deleted.

The Hardware View page for the selected director appears.

3. Select **Maintenance > Firmware Library**.

The Director Firmware Library dialog box appears (Figure 64).

4. Select the firmware version to be deleted and click **Delete**.

A confirmation dialog box appears.


5. Click **OK**.

The selected firmware version is deleted from the Director Firmware Library dialog box.

6. Click **Close**.

Downloading a firmware version to a director

This procedure downloads a selected firmware version from the HAFM appliance library to a director managed by the open instance of the Element Manager. The procedure applies to a director with two (redundant) CTP2 cards. The process occurs concurrently without taking the director offline or disrupting operation. The new firmware version takes effect when control is passed from the active to the backup CTP2 card. Although director operation is not affected, name server, alias server, and login server functions are momentarily unavailable during CTP2 card switchover. Although traffic is not disrupted, the green port LEDs will flicker or blink during the IPL portion of this operation as control is passed to the other CTP2 card.

 **NOTE:** When downloading a firmware version, follow procedural information in the release notes that accompany the firmware version. This information supplements information provided in this general procedure.

Use these steps to download a firmware version to a director:

1. Open the HAFM application.

The View All - HAFM 8.6 main window appears.

2. Before downloading firmware to a director, ensure the required, compatible version of the HAFM application is running on the HAFM appliance. Refer to the release notes that shipped with HAFM.

- a. Select **Help > About**.

The About dialog box appears and lists the HAFM application version.

Click **OK** to close the dialog box.

- b. If required, install the correct version of the HAFM application.

3. Double-click the icon representing the director to which the firmware version will be downloaded.

The Hardware View page for the selected director appears.

4. As a precaution to preserve director configuration information, complete the backup procedure as follows:

- a. Open the HAFM application.

The View All - HAFM 8.6 main window appears.

- b. Double-click the icon representing the director for which the configuration file will be backed up.

The Hardware View page for the selected director appears.

- c. Select **Maintenance > Backup & Restore Configuration**.

The Backup and Restore Configuration dialog box appears (Figure 67).

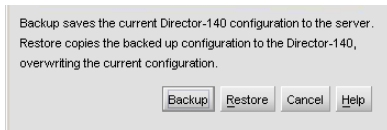


Figure 67 Backup and Restore Configuration dialog box

- d. Click **Backup**.

When the backup process finishes, the Backup Complete dialog box appears.

- e. Click **OK** to close the dialog box and return to the Hardware View page.

5. Select **Maintenance > Firmware Library**.

The Director Firmware Library dialog box appears (Figure 64).

6. Select the firmware version to be downloaded and click **Send**.

The send function verifies existence of certain director conditions before the download process begins. If an error occurs, a message appears indicating the problem must be fixed before firmware is downloaded. Conditions that terminate the process include:

- A redundant CTP2 card failure.
- The firmware version is being installed on the director by another user.
- The director-to-HAFM appliance link is down.

If a problem occurs and a corresponding message appears, refer to the *HP StorageWorks Director 2/64 service manual* for specific information on isolating the problem. If no error occurs, the Send Firmware confirmation box appears.

7. Click **Yes**.

The Send Firmware dialog box appears.

As the download begins, a `Writing data to FLASH` message appears at the top of the dialog box, followed by a `Sending Files` message. This message remains as a progress bar travels across the dialog box to show percent completion of the download. The bar progresses to 50% when the last file is transmitted to the first CTP2 card. The bar remains at the 50% point until the director performs an Initial Program Load (IPL) (indicated by an `IPLing` message). During the IPL, the director-to-HAFM appliance link drops momentarily and the following occurs at the Element Manager:

- As the network connection drops, the director Status table turns yellow, the Status box displays No Link, and the State box displays a reason message.
- The alert panel at the bottom of the navigation control panel displays a gray square, indicating director status is unknown.
- Illustrated FRUs in the Hardware View page are removed, and then displayed again as the connection is re-established.

After the IPL, a `Synchronizing CTP2s` message appears. This message remains as files are transmitted to the second CTP2 card and the progress bar travels across the dialog box to 100%. When the download reaches 100%, a `Send firmware complete` message appears.

8. Click **Close** to close the dialog box.

9. Click **Close**.

Backing up the director's configuration

Use these steps to back up the configuration file to the HAFM appliance:

1. Open the HAFM application.

The View All - HAFM 8.6 main window appears.

2. Double-click the icon representing the director for which the configuration file will be backed up.

The Hardware View page for the selected director appears.

3. Select **Maintenance > Backup & Restore Configuration**.

The Backup and Restore Configuration dialog box appears (Figure 67).

4. Click **Backup**.

When the backup process finishes, the Backup Complete dialog box appears.

5. Click **OK**.

A Regulatory compliance and safety

Regulatory compliance

Federal Communications Commission notice

Part 15 of the Federal Communications Commission (FCC) Rules and Regulations has established Radio Frequency (RF) emission limits to provide an interference-free radio frequency spectrum. Many electronic devices, including computers, generate RF energy incidental to their intended function and are, therefore, covered by these rules. These rules place computers and related peripheral devices into two classes, A and B, depending upon their intended installation. Class A devices are those that may reasonably be expected to be installed in a business or commercial environment. Class B devices are those that may reasonably be expected to be installed in a residential environment (i.e., personal computers). The FCC requires devices in both classes to bear a label indicating the interference potential of the device as well as additional operating instructions for the user.

The rating label on the device shows which class (A or B) the equipment falls into. Class B devices have an FCC logo or FCC ID on the label. Class A devices do not have an FCC logo or FCC ID on the label. Once the class of the device is determined, refer to the following corresponding statement.

Class A equipment

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at personal expense.

Class B equipment

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit that is different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or television technician for help.

Declaration of conformity for products marked with the FCC logo, United States only

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

For questions regarding your product, visit <http://www.hp.com>.

For questions regarding this FCC declaration, contact us by mail or telephone:

- Hewlett-Packard Company
P.O. Box 692000, Mailstop 510101
Houston, Texas 77269-2000
- 1-281-514-3333

To identify this product, refer to the part, Regulatory Model Number, or product number found on the product.

Modifications

The FCC requires the user to be notified that any changes or modifications made to this device that are not expressly approved by Hewlett-Packard Company may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with shielded cables with metallic RFI/EMI connector hoods in order to maintain compliance with FCC Rules and Regulations.

Regulatory compliance identification numbers

For the purpose of regulatory compliance certifications and identification, your product has been assigned a unique Regulatory Model Number. The RMN can be found on the product nameplate label, along with all required approval markings and information. When requesting compliance information for this product, always refer to this RMN. The Regulatory Model Number should not be confused with the marketing name or model number of the product.

Laser device

All HP systems equipped with a laser device comply with safety standards, including International Electrotechnical Commission (IEC) 825. With specific regard to the laser, the equipment complies with laser product performance standards set by government agencies as a Class 1 laser product. The product does not emit hazardous light.

Laser safety warning

⚠ **WARNING!** To reduce the risk of exposure to hazardous radiation:

- Do not try to open the laser device enclosure. There are no user-serviceable components inside.
- Do not operate controls, make adjustments, or perform procedures to the laser device other than those specified herein.
- Allow only HP authorized service technicians to repair the laser device.

Certification and classification information


This product contains a laser internal to the fiber optic (FO) transceiver for connection to the Fibre Channel communications port.

In the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in the Department of Health and Human Services (DHHS) regulation 21 CFR, Subchapter J. A label on the plastic FO transceiver housing indicates the certification.

Outside the USA, the FO transceiver is certified as a Class 1 laser product conforming to the requirements contained in IEC 825-1:1993 and EN 60825-1:1994, including Amendment 11:1996 and Amendment 2:2001.

Laser product label

The optional label in [Figure 68](#) or equivalent may be located on the surface of the HP supplied laser device.

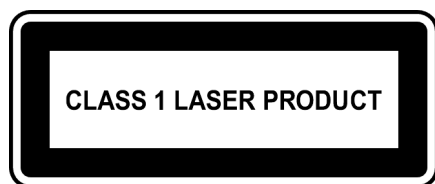

This optional label indicates that the product is classified as a CLASS 1 LASER PRODUCT. This label may appear on the laser device installed in your product.

Figure 68 Class 1 laser product label

International notices and statements

Canadian notice (avis Canadien)

Class A equipment

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe A respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

Class B equipment

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

European Union notice

Products bearing the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (73/23/EEC) issued by the Commission of the European Community and if this product has telecommunication functionality, the R&TTE Directive (1999/5/EC).

Compliance with these directives implies conformity to the following European Norms (in parentheses are the equivalent international standards and regulations):

- EN55022 (CISPR 22) - Electromagnetic Interference
- EN55024 (IEC61000-4-2, IEC61000-4-3, IEC61000-4-4, IEC61000-4-5, IEC61000-4-6, IEC61000-4-8, IEC61000-4-11) - Electromagnetic Immunity
- Power Quality:
 - EN61000-3-2 (IEC61000-3-2) - Power Line Harmonics
 - EN61000-3-3 (IEC61000-3-3) - Power Line Flicker
- EN60950 (IEC60950) - Product Safety
- Also approved under UL 60950/CSA C22.2 No. 60950-00, Safety of Information Technology Equipment.

BSMI notice

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

Japanese notice

ご使用になっている装置にVCCIマークが付いていましたら、次の説明文をお読み下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

VCCIマークが付いていない場合には、次の点にご注意下さい。

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Korean notices

A급 기기 (업무용 정보통신기기)

이 기기는 업무용으로 전자파적합등록을 한 기기이오니
판매자 또는 사용자는 이 점을 주의하시기 바라며, 만약
잘못판매 또는 구입하였을 때에는 가정용으로 교환하시기
바랍니다.

B급 기기 (가정용 정보통신기기)

이 기기는 가정용으로 전자파적합등록을 한 기기로서
주거지역에서는 물론 모든지역에서 사용할 수 있습니다.


Safety

Battery replacement notice

Your computer is equipped with a lithium manganese dioxide, a vanadium pentoxide, or an alkaline internal battery or battery pack. There is a danger of explosion and risk of personal injury if the battery is incorrectly replaced or mistreated. Replacement is to be done by an HP authorized service provider using the HP spare part designated for this product. For more information about battery replacement or proper disposal, contact an HP authorized reseller or HP authorized service provider.

⚠ WARNING! Your computer contains an internal lithium manganese dioxide, a vanadium pentoxide, or an alkaline battery pack. There is risk of fire and burns if the battery pack is not properly handled. To reduce the risk of personal injury:

- Do not attempt to recharge the battery.
 - Do not expose to temperatures higher than 60°C.
 - Do not disassemble, crush, puncture, short external contacts, or dispose of in fire or water.
 - Replace only with the HP spare part designated for this product.
-

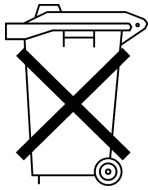

Batteries, battery packs, and accumulators should not be disposed of together with the general household waste. To forward them to recycling or proper disposal, please use the public collection system or return them to HP, an authorized HP Partner, or their agents.

For more information about battery replacement or proper disposal, contact an HP authorized reseller or service provider.

Taiwan battery recycling notice



廢電池請回收

The Taiwan EPA requires dry battery manufacturing or importing firms in accordance with Article 15 of the Waste Disposal Act to indicate the recovery marks on the batteries used in sales, giveaway or promotion. Contact a qualified Taiwanese recycler for proper battery disposal.

Power cords

The power cord set must meet the requirements for use in the country where the product was purchased. If the product is to be used in another country, purchase a power cord that is approved for use in that country.

The power cord must be rated for the product and for the voltage and current marked on the product electrical ratings label. The voltage and current rating of the cord should be greater than the voltage and current rating marked on the product. In addition, the diameter of the wire must be a minimum of 1.00 mm² or 18 AWG, and the length of the cord must be between 1.8 m (6 ft) and 3.6 m (12 ft). If you have questions about the type of power cord to use, contact an HP authorized service provider.

📖 NOTE: Route power cords so that they will not be walked on and cannot be pinched by items placed upon or against them. Pay particular attention to the plug, electrical outlet, and the point where the cords exit from the product.

Japanese power cord notice

製品には、同梱された電源コードをお使い下さい。
同梱された電源コードは、他の製品では使用出来ません。

Electrostatic discharge

To prevent damage to the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor may damage system boards or other static-sensitive devices. This type of damage may reduce the life expectancy of the device.

Preventing electrostatic damage

To prevent electrostatic damage, observe the following precautions:


- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly (see ["Grounding methods"](#) on page 105).

Grounding methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm (± 10 percent) resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an HP authorized reseller install the part.

 **NOTE:** For more information on static electricity, or assistance with product installation, contact your HP authorized reseller.

B Technical specifications

This appendix contains the following information:

- [Physical dimensions](#), page 107
- [Environmental specifications](#), page 107
- [Power requirements](#), page 108
- [Operating tolerances](#), page 108
- [Laser information](#), page 109

Physical dimensions

Table 7 lists Director 2/64 dimensions.

Table 7 Dimensions

Dimension	Size
Height	39.7 cm (15.7 in)
Width	44.5 cm (17.5 in)
Depth	54.6 cm (21.5 in)
Weight	52.3 kg (115 lb)
Shipping Weight	76.4 kg (168 lb)

Environmental specifications

Table 8 lists environmental ranges for shipping, storing, and operating the HP StorageWorks Director 2/64.

Table 8 Environmental specifications

Specification	Shipping	Storage	Operating
Weight	76.4 kg (168 lb)	52.3 kg (115 lb)	52.3 kg (115 lb)
Temperature	–40°F to 140°F (40°C to 60 °C)	34°F to 140°F (1°C to 60 °C)	40°F to 104°F (4°C to 40 °C)
Humidity	5% to 100%	5% to 80%	8% to 80%
Maximum wet-bulb temperature	84°F (29°C)	84°F (29°C)	81°F (27°C)
Altitude	40,000 ft (12,192 km)	40,000 ft (12,192 km)	10,000 ft (3,048 km)

Power requirements

Table 9 lists Director 2/64 power requirements.

Table 9 Power requirements

Specification	Value
Input voltage	100 to 120 or 200 to 240 VAC
Input frequency	50/60 Hz

Operating tolerances

Table 10 lists heating and cooling specifications, shock and vibration tolerances, acoustical noise, and inclination.

Table 10 Operating tolerances

Specification	Value
Heat dissipation	16 UPM cards (maximum): 490W (1,672 BTU/hr)
Cooling airflow clearances	Right and left sides: 5.1 cm (2.0 in) Front and rear: 7.6 cm (3.0 in) Top and bottom: No clearance required
Shock and vibration tolerance	60 Gs for 10 milliseconds without non-recoverable errors
Acoustical noise	6.9 Bels
Inclination	10° maximum

Laser information

Three configurations of cards with fixed optics will be provided for each of the connector types: four extended long-wave ports, four long-wave ports, and four short-wave ports. [Table 11](#) lists the 2 Gb laser specifications.

Table 11 Laser specs - 2 Gb

Part number	Transceivers on UPM card	Wave length	Media/distance	Standard
300836-B21 Long wave - 35 Km	4 Extended Long wave	1310 nm	9/125 μ m Single-mode: 1 m–35 Km	100-SM-LL-L
300835-B21 Long wave - 10 Km	4 Long wave	1310 nm	9/125 μ m Single-mode: 1 m–10 Km	100-SM-LL-L
300834-B21 Short wave	4 Short wave	850 nm	50/125 μ m Multi-mode: 2 m–500 m 62.5/125 μ m Multi-mode: 1 m–200 m	100-M5-SN-I

Index

- A**
 - accumulators 104
 - AIX operating system 90
 - alerts, introduction 14
 - alkaline battery warning 104
 - asynchronous RS-232
 - null modem cable 23
 - authorized reseller, HP 11
 - Avis Canadian, regulatory compliance notice 101
- B**
 - backing up director configuration file 98
 - batteries
 - recycling or disposal 104
 - replacement
 - notice 103
 - warning 104
 - Taiwan EPA recycling and disposal 104
 - bb_credit 71
 - beaconing, introduction 15
 - boot straps, using 105
 - BSMI, regulatory compliance notice 102
- C**
 - cable management assembly 19
 - cables
 - FCC compliance statement 100
 - shielded 100
 - call-home feature
 - introduction 15
 - Canada, regulatory compliance notice 101
 - carton contents 33
 - certification and classification information, laser 101
 - CFR, laser compliance 19
 - changing the director's IP address 55
 - class 1 laser transceivers 19
 - Class A equipment, Canadian compliance statement 101
 - Class B equipment, Canadian compliance statement 102
 - clock speed, processor 90
 - Code of Federal Regulations 19
 - COMn properties dialog box 57
 - components of the director 17
 - configuration data, backing up 86
 - configure director network information 54
 - configure fabric parameters dialog box 70, 71
 - configure feature key dialog box
 - procedure 86
 - configure HAFM appliance 86
 - configure menu
 - features 86
 - HAFM appliance 86
 - configure menu, enable telnet 87
 - configure switch parameters dialog box 67, 68
 - configuring
 - ethernet events 79
 - fabric operating parameters 70
 - feature key 86
 - port addresses, FICON 76
 - connecting the director to the LAN segment 59
 - connectivity failures, causes of 16
 - conventions
 - document 10
 - text symbols 10
 - cord. See power cord
 - CTP cards, description 18
 - current rating 104
- D**
 - data collection 15
 - declaration of conformity 100
 - default
 - Windows 2000 password 91
 - Windows 2000 user name 91
 - default IP address 55
 - degraded fabric performance, causes of 16
 - diagnostic software, introduction 15
 - dialog boxes

- configure fabric parameters 70, 71
- configure feature key
 - procedure 86
- configure switch parameters 67, 68
- director
 - e_d_tov 17
 - fibre channel addresses 68
 - general description 13
 - hardware components 17
 - installation tools required 34
 - management, overview 13
 - NV-RAM 67, 70
 - r_a_tov 17
 - rerouting delay 69
 - tools supplied 22
- director 2/64
 - installing 34
- director 2/64 shipping carton
 - items 31
- director firmware
 - adding version 94
 - deleting a version 96
 - downloading 96
 - version 93
- director firmware library dialog box 93
- disposal, battery 104
- disposal, Taiwan EPA battery 104
- dissipating floor mats 105
- document
 - conventions 10
 - related documentation 9
- domain ID 16
 - insistent 69
 - preferred 68
- domain RSCNs 69
- downloading firmware 96

E

- e_d_tov 71
 - incompatible parameters 17
 - rerouting delay 69
- E_port segmentation
 - preferred domain ID 69
- e_port segmentation 16
 - causes of 17
- e_ports 20
- electrostatic damage prevention 105

- electrostatic discharge. See ESD
- e-mail notification
 - introduction 15
- enable telnet 87
- ESD
 - wrist strap 24
- ESD (electrostatic discharge)
 - obtaining additional information 105
 - precautions 105
 - prevention measures 105
 - storing products 105
 - transporting products 105
 - types of damage from 105

Ethernet

- hub
 - unpacking, inspecting, and installing 89
- ethernet
 - events, configure at HAFM appliance 79
 - events, enable at HAFM appliance 79
- ethernet network adapter 90
- European Union, regulatory compliance
 - notice 102

F

- f_ports 20
- fabric parameters
 - bb_credit 71
 - e_d_tov 71
 - interop mode 72
 - r_a_tov 71
 - switch priority 72
- fabric segmentation
 - preferred domain ID 69
- failover, SBAR assembly 22
- FC fabric element MIB, version 15
- FCC (Federal Communications Commission)
 - Class A Equipment, compliance notice 99
 - Class B Equipment, compliance notice 99
 - declaration of conformity 100
 - modifications 100
 - notice 99
- feature key 86
 - configuring 86
- features of the director 17
- Federal Communications Commission. See FCC
- fiber optic
 - cleaning kit 24

- protective plug 23
- Fibre Alliance MIB 15
- fibre channel addresses 68
- Fibre Channel ports
 - connecting cables 87
- FICON
 - port addresses, configuring 76
- FICON devices, communication 67
- FICON management server 67, 86
- FICON management style
 - FICON management server 67
- firmware
 - deleting version 96
 - determining version 93
 - modifying description 95
- firmware library 93
- floor mats, dissipating 105
- frames
 - routing of 69
- front bezel 19
- FRUs, CTP card 18

G

- g_ports 20
 - UPM card 19
- German noise declaration 103
- ground strap specifications 105
- grounding
 - methods 105
 - straps, wearing 105
 - suggested equipment for 105

H

- HA PA-RISC processor 90
- HAFM
 - configuring ports 73
 - configuring SNMP trap message recipients 76
 - enabling e-mail notification 77
 - enabling to manage the director 61
 - remote location 89
 - remote location requirements 89
 - setting offline 66
 - setting the director online 65
- HAFM 8
 - login dialog box 91
- HAFM appliance

- Fibre Alliance MIB 15
- hard drives, remote workstation 90
- heel straps, using 105
- help, obtaining 11
- Hewlett-Packard rack installation 41
- hexagonal adapter 22
- High Availability Fabric Manager
 - login dialog box 91
- homogeneous fabric
 - interop mode 72
- hop counts 69
- HP
 - address for
 - FCC questions 100
 - authorized reseller 11
 - series number 100
 - storage web site 12
 - Subscriber's choice web site 11
 - technical support 11
 - telephone number
 - FCC questions 100
- HP 9000 series rack installation 35
- HP-UX operating system 90
- HyperTerminal 24, 58

I

- IEC EMC, worldwide regulatory compliance notice 101
- inband switch management 67
- insistent domain ID 68, 69
- installation
 - Hewlett-Packard rack 41
 - HP 9000 series rack 35
 - requirements 27
 - tools required 34
- installation options 27
 - customer-supplied equipment rack 27
 - table or desk top 27
- installation tasks
 - backing-up configuration data 86
 - unpacking, inspecting, and installing
 - Ethernet hub 89
- installing
 - cage nuts 37
 - mounting hardware 37, 47
 - positioning the director in the rack 38
 - shelf brackets 35, 42

- tips 34
- installing rear angle brackets 39
- Intel Pentium processor 89
- Internet Explorer 90
- interop mode 72
 - homogeneous fabric 72
 - open fabric 1.0 72
- inter-switch link, g_port 20
- IP address 55
- ISL, g_port 20
- items
 - director 2/64 shipping carton 31

J

- Japan
 - regulatory compliance notice 103

K

- Korean, regulatory compliance notice 103

L

- label, laser 101
- laser
 - international certification and classification information 101
 - product label 101
 - radiation, warning 101
 - regulatory compliance notice 100
- laser transceivers 19
- LEDs
 - front bezel 19
 - power supplies 19
 - SBAR assembly 22
 - UPM card 20
- lift device 35
- Linux operating system, version 89
- lithium battery 103
- logs, introduction 14
- long-wave laser transceivers 20
- loopback plug
 - multi-mode 22
 - single-mode 22

M

- MAC address 55
- maintenance port 15, 22

- management server
 - FICON 86
 - open systems 86
- management style
 - FICON 67
 - open systems 67
- managing
 - director 13
- memory, remote workstation 90
- MIBs 15
- Microsoft Internet Explorer 90
- mode
 - interop 72
- multi-mode fiber optic cables 20
- multi-switch fabric 16
 - connectivity failures, causes of 16
 - degraded performance, causes of 16
 - domain IDs 16
 - e_port segmentation
 - causes of 17
 - principal switch 72
 - rerouting delay 69
 - zoning 16
- multi-switch fabric, e_ports 20

N

- n_ports 20
- Netscape Navigator 90
- network addresses
 - changing 55
 - default settings 55
 - gateway 55
 - IP address 55
 - MAC address 55
 - subnet mask 55
- noise declaration, German 103
- null modem cable 23
- NV-RAM 67, 70

O

- OFC class 1 laser transceivers 19
- online state, setting 65
- open fabric 1.0
 - interop mode 72
- open systems management server 86
- open systems management style 67

- optional kits
 - combination long-wave/short-wave port module kit [24](#)
 - short-wave port module kits [24](#)
- OSI devices, communication [67](#)

P

- parts
 - proper handling [105](#)
 - storing [105](#)
 - transporting [105](#)
- password
 - default Windows 2000 [91](#)
- PDU [40](#)
- port addresses, FICON, configuring [76](#)
- port loopback diagnostic tests, fiber optic
 - loopback plug [22](#)
- POST [54](#)
- power cord
 - compliance notice [104](#)
 - current rating [104](#)
 - replacement [104](#)
 - set [104](#)
 - voltage rating [104](#)
- power module assembly [22](#)
- power supplies [19](#)
- power supply requirements [108](#)
- power switch [22](#)
- POWER3 microprocessor [90](#)
- power-on self test [54](#)
- PowerPC microprocessor [90](#)
- preferred domain ID [68](#)
 - multi-switch fabric [68](#)
- preventing electrostatic damage [105](#)
- principal switch, determining [72](#)
- ProComm Plus [24](#)
- product manager
 - SNMP agent [14](#)
- protective plug [23](#)

R

- r_a_tov [71](#)
 - incompatible parameters [17](#)
- rack stability, warning [11](#)
- rear angle brackets [38](#)
- recycling, battery [104](#)

- recycling, Taiwan EPA battery [104](#)
- regulatory compliance
 - information number [100](#)
 - notices
 - BSMI [102](#)
 - Canada [101](#)
 - Class A [99](#)
 - Class B [99](#)
 - European Union [102](#)
 - HP series number [100](#)
 - IEC EMC statement, worldwide [101](#)
 - Japan [103](#)
 - Korean [103](#)
 - lasers [100](#)
 - modifications [100](#)
 - shielded cables [100](#)
- related documentation [9](#)
- replacing a power cord [104](#)
- rerouting delay [69](#)
- RFC 1213
 - definition [15](#)
- RFI/EMI connector hoods [100](#)

S

- safety
 - ESD grounding cable with wrist strap [24](#)
 - fiber optic protective plug [23](#)
- SANtegrity Binding features
 - switch binding [73](#)
- SBAR assembly [21](#)
- segmentation
 - causes of [17](#)
- series number, regulatory compliance [100](#)
- serviceability features [14](#)
- set director date and time manually [64](#)
- setting, online state [65](#)
- shelf brackets [35](#), [42](#)
- shortwave laser transceivers [20](#)
- single-mode fiber optic cables [20](#)
- site plan [27](#)
- SNMP agent
 - general description [14](#)
- SNMP trap messages
 - maximum recipients [15](#)
- Solaris operating system [90](#)
- static
 - electricity [105](#)

- static-dissipating work mat 105
- static-safe containers
 - storing products 105
 - transporting products 105
- static-sensitive devices 105
- straps, ground
 - boot 105
 - heel 105
 - toe 105
- Subscriber's choice, HP 11
- SunOS operating system 90
- suppress RSCNs on zone set activations 70
- switch
 - error-detection, reporting, and serviceability features 14
 - multi-switch fabric 16
- switch binding 73
- switch parameters
 - domain RSCNs 69
 - insistent domain ID 69
 - NV-RAM storage 67, 70
 - preferred domain ID 68
 - rerouting delay 69
 - suppress RSCNs on zone set activations 70
- switch priority 72
 - related number codes 72
- switches, principal, determining 72
- symbols in text 10
- synchronize date and time 64
- system
 - preventing electrostatic discharge to 105

T

- Taiwan EPA battery recycling and disposal 104
- TCP/IP MIB-II
 - definition 15
- technical specifications, power requirements 108
- technical support, HP 11
- telephone numbers
 - FCC questions 100
- telnet, enabling 87
- text symbols 10
- tips for installing 34
- toe straps, using 105
- tools
 - supplied by service personnel 24
 - supplied with director 22

- tools required to install a director 34
- tools, conductive type 105
- torque tool 22
- trap messages
 - maximum recipients 15

U

- UltraSPARC-II processor 90
- UNIX workstation, specifications 89
- UPM cards 19
- user name
 - default Windows 2000 91

V

- versions
 - AIX operating system 90
 - director firmware 14
 - FC fabric element MIB 15
 - firmware
 - deleting 96
 - determining 93
 - modifying description 95
 - HP-UX operating system 90
 - Internet Explorer 90
 - Linux operating system 89
 - Netscape Navigator 90
 - Solaris operating system 90
 - SunOS operating system 90
 - Windows operating systems 24, 89
- video card, remote workstation 90
- voltage compliance rating 104
- voltage, AC power connectors 22

W

- warning
 - rack stability 11
- warnings
 - alkaline batteries 104
 - battery replacement 104
 - lasers, radiation 101
- web server, overview 14
- web sites
 - HP storage 12
 - HP Subscriber's choice 11
- Windows 2000
 - default password 91

- default user name [91](#)
- Windows operating systems, versions [24](#), [89](#)
- work mat, static-dissipating [105](#)
- workstation, UNIX [89](#)
- wrist straps
 - specifications [105](#)
 - using [105](#)
- WWN
 - principal switch [72](#)

Z

- zone set, description of [16](#)
- zoning
 - joining, rules of [16](#)

